

MOTOMAN-MA3100 INSTRUCTIONS

TYPE: YR-MA03100-A00 (STANDARD SPECIFICATION)
YR-MA03100-A01 (WITH LIMIT SWITCHES FOR LSU-AXES)

Upon receipt of the product and prior to initial operation, read these instructions thoroughly, and retain for future reference.

MOTOMAN INSTRUCTIONS

MOTOMAN-MA3100 INSTRUCTIONS
DX100 INSTRUCTIONS
DX100 OPERATOR'S MANUAL
DX100 MAINTENANCE MANUAL

The DX100 Operator's manual above corresponds to specific usage.
Be sure to use the appropriate manual.

Part Number: 157532-1CD
Revision: 0





MANDATORY

- This instruction manual is intended to explain mainly on the mechanical part of the MOTOMAN-MA3100 for the application to the actual operation and for proper maintenance and inspection. It describes on safety and handling, details on specifications, necessary items on maintenance and inspection, to explain operating instructions and maintenance procedures. Be sure to read and understand this instruction manual thoroughly before installing and operating the manipulator.
- General items related to safety are listed in Chapter 1: Safety of the DX100 Instructions. To ensure correct and safe operation, carefully read the DX100 instructions before reading this manual.



CAUTION

- Some drawings in this manual are shown with the protective covers or shields removed for clarity. Be sure all covers and shields are replaced before operating this product.
- The drawings and photos in this manual are representative examples and differences may exist between them and the delivered product.
- YASKAWA may modify this model without notice when necessary due to product improvements, modifications, or changes in specifications. If such modification is made, the manual number will also be revised.
- If your copy of the manual is damaged or lost, contact a YASKAWA representative to order a new copy. The representatives are listed on the back cover. Be sure to tell the representative the manual number listed on the front cover.
- YASKAWA is not responsible for incidents arising from unauthorized modification of its products. Unauthorized modification voids your product's warranty.

Notes for Safe Operation

Read this manual carefully before installation, operation, maintenance, or inspection of the MOTOMAN-MA3100.

In this manual, the Notes for Safe Operation are classified as “WARNING”, “CAUTION”, “MANDATORY”, or “PROHIBITED”.



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury to personnel.



CAUTION

Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury to personnel and damage to equipment. It may also be used to alert against unsafe practices.



MANDATORY

Always be sure to follow explicitly the items listed under this heading.



PROHIBITED

Must never be performed.

Even items described as “CAUTION” may result in a serious accident in some situations. At any rate, be sure to follow these important items.



To ensure safe and efficient operation at all times, be sure to follow all instructions, even if not designated as “CAUTION” and “WARNING”.



WARNING

- Before operating the manipulator, check that servo power is turned OFF pressing the emergency stop buttons on the front door of the DX100 and the programming pendant. When the servo power is turned OFF, the SERVO ON LED on the programming pendant is turned OFF.

Injury or damage to machinery may result if the emergency stop circuit cannot stop the manipulator during an emergency. The manipulator should not be used if the emergency stop buttons do not function.

Fig. : Emergency Stop Button



- Once the emergency stop button is released, clear the cell of all items which could interfere with the operation of the manipulator. Then turn the servo power ON.

Injury may result from unintentional or unexpected manipulator motion.

Fig. : Release of Emergency Stop



- Observe the following precautions when performing teaching operations within the P-point maximum envelope of the manipulator:
 - View the manipulator from the front whenever possible.
 - Always follow the predetermined operating procedure.
 - Keep in mind the emergency response measures against the manipulator's unexpected motion toward you.
 - Ensure that you have a safe place to retreat in case of emergency.

Improper or unintended manipulator operation may result in injury.

- Confirm that no person is present in the P-point maximum envelope of the manipulator and that you are in a safe location before:
 - Turning ON the power for the DX100.
 - Moving the manipulator with the programming pendant.
 - Running the system in the check mode.
 - Performing automatic operations.

Injury may result if anyone enters the P-point maximum envelope of the manipulator during operation. Always press an emergency stop button immediately if there is a problem.

The emergency stop buttons are located on the right of front door of the DX100 and the programming pendant.



CAUTION

- Perform the following inspection procedures prior to conducting manipulator teaching. If problems are found, repair them immediately, and be sure that all other necessary processing has been performed.
 - Check for problems in manipulator movement.
 - Check for damage to insulation and sheathing of external wires.
- Always return the programming pendant to the hook on the DX100 cabinet after use.

The programming pendant can be damaged if it is left in the P-point maximum envelope of the manipulator, on the floor, or near fixtures.

- Read and understand the Explanation of Warning Labels in the DX100 instructions before operating the manipulator.

Definition of Terms Used Often in This Manual

The MOTOMAN is the YASKAWA industrial robot product.

The MOTOMAN usually consists of the manipulator, the controller, the programming pendant and supply cables.

In this manual, the equipment is designated as follows:

Equipment	Manual Designation
DX100 controller	DX100
DX100 programming pendant	Programming pendant
Cable between the manipulator and the controller	Manipulator cable

MA3100



Explanation of Warning Labels

The following warning labels are attached to the manipulator.

Always follow the warnings on the labels.

Also, an identification label of “Nameplate” with important information is placed on the body of the manipulator. Prior to operating the manipulator, confirm the contents.

Fig. : Warning Label Locations

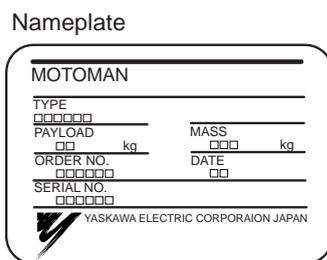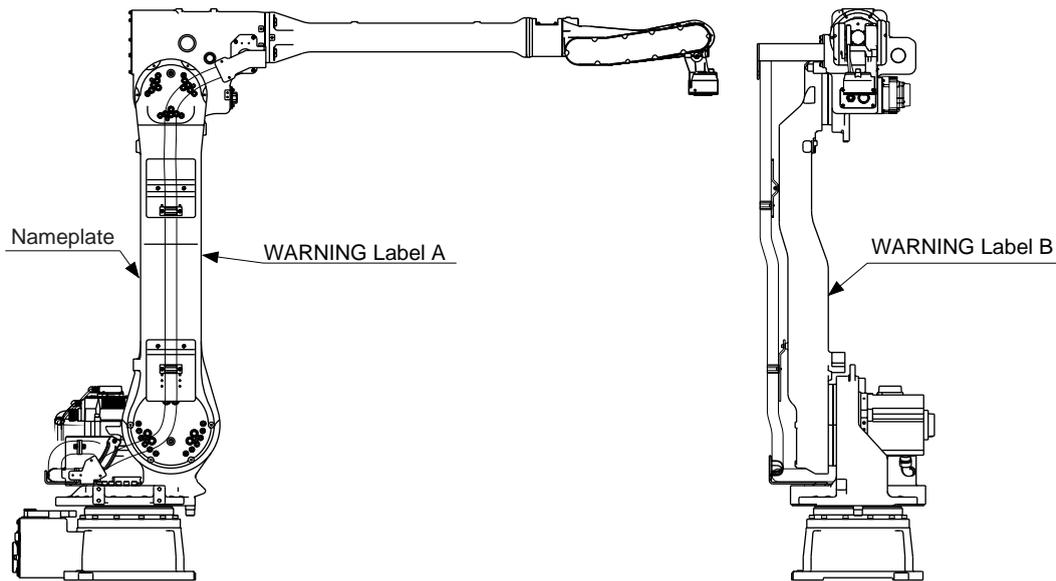

1	Product Confirmation	1-1
1.1	Contents Confirmation	1-1
1.2	Order Number Confirmation	1-2
2	Transport.....	2-1
2.1	Transport Method	2-1
2.1.1	Using a Crane	2-2
2.1.2	Using a Forklift.....	2-3
2.2	Shipping Bolts and Brackets.....	2-4
3	Installation.....	3-1
3.1	Installation of Safeguarding	3-2
3.2	Mounting Procedures for Manipulator Base	3-2
3.2.1	Mounting the Manipulator on the Baseplate.....	3-3
3.2.2	Mounting the Manipulator on the Floor.....	3-4
3.3	Types of Mounting	3-5
3.3.1	S-Axis Operating Range.....	3-5
3.3.2	Processes in Fixing the Manipulator Base	3-5
3.3.3	Precautions to Prevent the Manipulator from Falling.....	3-5
3.4	Notes on Mounting the Manipulators on the Ceiling.....	3-6
3.5	Location	3-8
4	Wiring.....	4-1
4.1	Grounding	4-1
4.2	Cable Connection	4-2
4.2.1	Connection to the Manipulator.....	4-2
4.2.2	Connection to the DX100	4-2
5	Basic Specifications.....	5-1
5.1	Basic Specifications.....	5-1
5.2	Part Names and Working Axes.....	5-2
5.3	Manipulator Base Dimensions	5-2
5.4	Dimensions and P-Point Maximum Envelope.....	5-3
5.5	Alterable Operating Range	5-4
6	Allowable Load for Wrist Axis and Wrist Flange	6-1
6.1	Allowable Wrist Load	6-1

MA3100	Contents	
6.2	Wrist Flange.....	6-2
7	System Application.....	7-1
7.1	Peripheral Equipment Mounts.....	7-1
7.2	Internal User I/O Wiring Harness and Air Lines.....	7-2
8	Electrical Equipment Specification.....	8-1
8.1	Position of Limit Switch.....	8-1
8.2	Internal Connections.....	8-2
9	Maintenance and Inspection.....	9-1
9.1	Inspection Schedule.....	9-1
9.2	Notes on Maintenance Procedures.....	9-6
9.2.1	Battery Pack Replacement.....	9-6
9.3	Notes on Grease Replenishment/Exchange Procedures.....	9-8
9.3.1	Grease Replenishment/Exchange for S-Axis Speed Reducer.....	9-8
9.3.1.1	Grease Replenishment (Refer to <i>fig. 9-4 "S-Axis Speed Reducer Diagram" at page 9-8.</i>).....	9-9
9.3.1.2	Grease Exchange (Refer to <i>fig. 9-4 "S-Axis Speed Reducer Diagram" at page 9-8.</i>).....	9-9
9.3.2	Grease Replenishment/Exchange for L-Axis Speed Reducer.....	9-11
9.3.2.1	Grease Replenishment (Refer to <i>fig. 9-5 "L-Axis Speed Reducer" .</i>).....	9-11
9.3.2.2	Grease Exchange (Refer to <i>fig. 9-5 "L-Axis Speed Reducer" at page 9-11.</i>).....	9-12
9.3.3	Grease Replenishment/Exchange for U-Axis Speed Reducer.....	9-13
9.3.3.1	Grease Replenishment (Refer to <i>fig. 9-7 "U-Axis Speed Reducer" .</i>).....	9-13
9.3.3.2	Grease Exchange (Refer to <i>fig. 9-7 "U-Axis Speed Reducer" at page 9-13.</i>).....	9-14
9.3.4	Grease Replenishment/Exchange for R-Axis Speed Reducer.....	9-15
9.3.4.1	Grease Replenishment (Refer to <i>fig. 9-8 "R-Axis Speed Reducer" .</i>).....	9-15
9.3.5	Grease Replenishment for B-Axis Speed Reducer.....	9-17
9.3.6	Grease Replenishment for T-Axis Gear.....	9-18
9.3.7	Grease Replenishment for R-axis Cross Roller Bearing.....	9-20
9.3.7.1	Grease Replenishment.....	9-20
9.3.8	Notes for Maintenance.....	9-21
9.3.8.1	Battery Pack Connection.....	9-21
9.3.8.2	Wrist Unit.....	9-22
10	Recommended Spare Parts.....	10-1
11	Parts List.....	11-1

11.1 S-Axis Unit.....	11-1
11.2 L-Axis Unit.....	11-3
11.3 U-Axis Unit.....	11-5
11.4 R-Axis Unit.....	11-7
11.5 Wrist Unit.....	11-10

1 Product Confirmation



CAUTION

- Confirm that the manipulator and the DX100 have the same order number. Special care must be taken when more than one manipulator is to be installed.

If the numbers do not match, manipulators may not perform as expected and cause injury or damage.

1.1 Contents Confirmation

Confirm the contents of the delivery when the product arrives.


Standard delivery includes the following four items (Information for the content of optional goods is given separately):

- Manipulator
- DX100
- Programming Pendant
- Manipulator cables (between the DX100 and the manipulator)

1.2 Order Number Confirmation

Check that the order number of the manipulator corresponds to the DX100. The order number is indicated on a label as shown below.

Fig. 1-1: Location of Order Number Labels

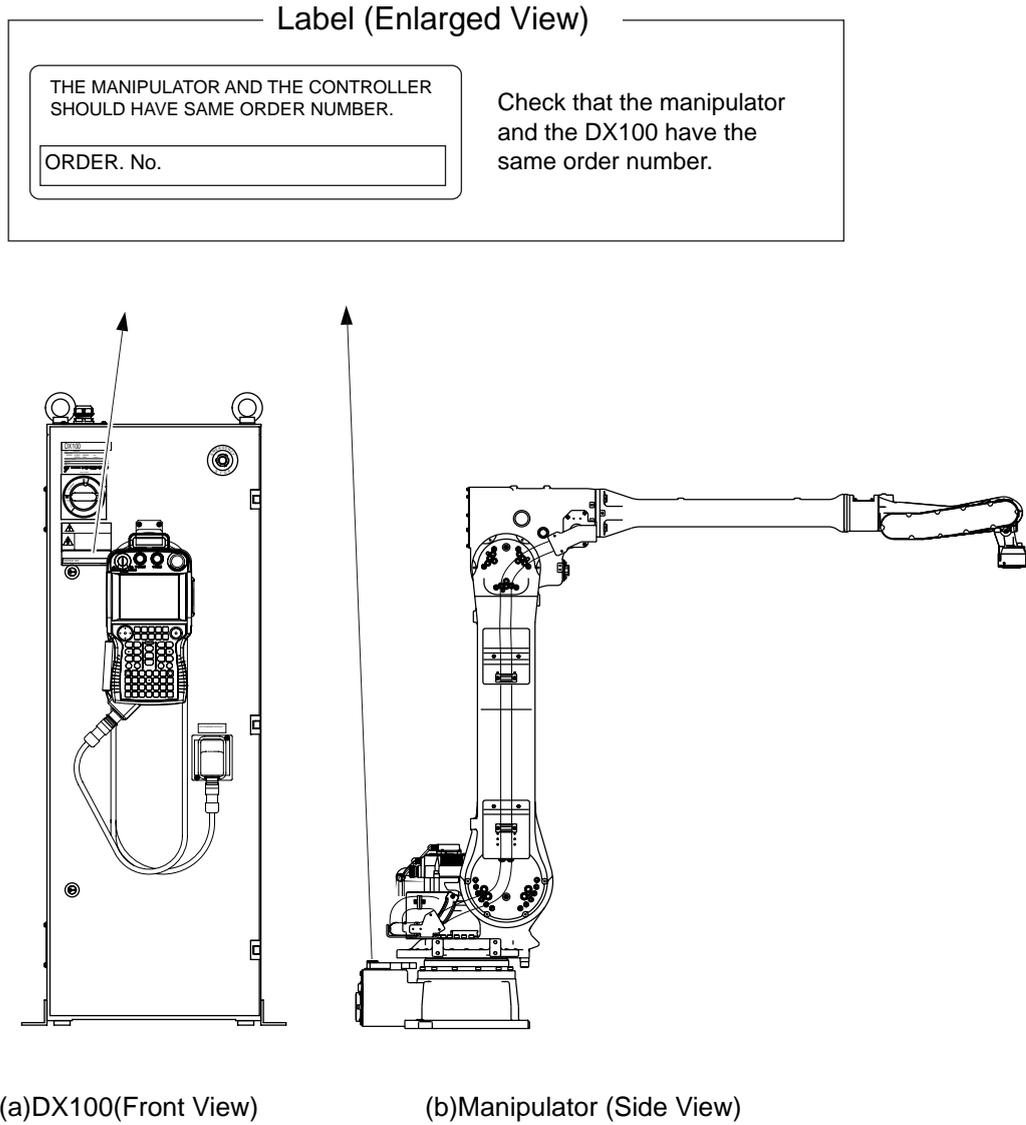

2 Transport



CAUTION

- Sling and crane or forklift operations must be performed by authorized personnel only.

Failure to observe this caution may result in injury or damage.

- Avoid excessive vibration or shock during transport.

The system consists of precision components. Failure to observe this caution may adversely affect performance.

2.1 Transport Method




- The weight of the manipulator is approximately 526 kg including the shipping bolts and brackets. Use a wire rope strong enough to withstand the weight.
- The attached eyebolts are designed to support the manipulator mass. Never use them for anything other than transporting the manipulator.
- Mount the shipping bolts and brackets before transporting the manipulator.
- Avoid putting external force on the arm of motor unit when transporting by a crane, forklift, or other equipment. Failure to observe this instruction may result in injury.

2.1.1 Using a Crane

As a rule, the manipulator should be lifted by a crane with a four-leg bridle sling using the shipping bolts and brackets when removing it from the package and moving it. Be sure that the manipulator is fixed with the shipping bolts and brackets before transport, and lift it in the posture as shown in *fig. 2-1 "Transport Using a Crane"*.

Fig. 2-1: Transport Using a Crane

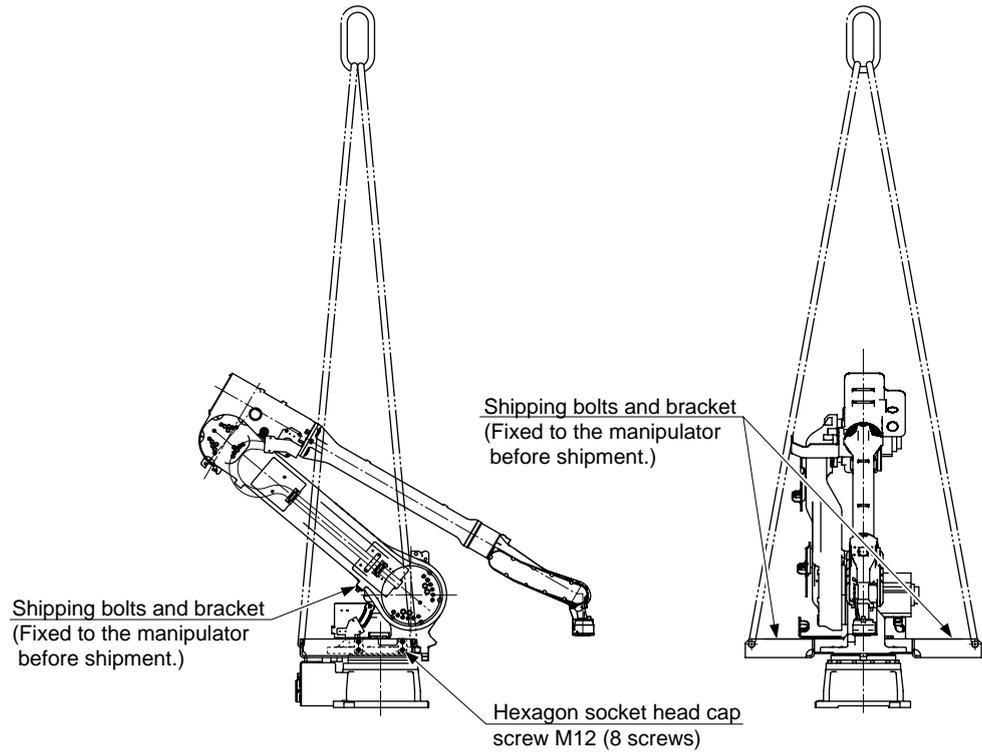


MA3100

2 Transport
2.1 Transport Method

2.1.2 Using a Forklift

When using a forklift, the manipulator should be fixed on a pallet with shipping bolts and brackets as shown in *fig. 2-2 "Transport Using a Forklift"*. Insert claws under the pallet and lift it. The pallet must be strong enough to support the manipulator. Transport the manipulator slowly with due caution in order to avoid overturning or slippage.

Fig. 2-2: Transport Using a Forklift

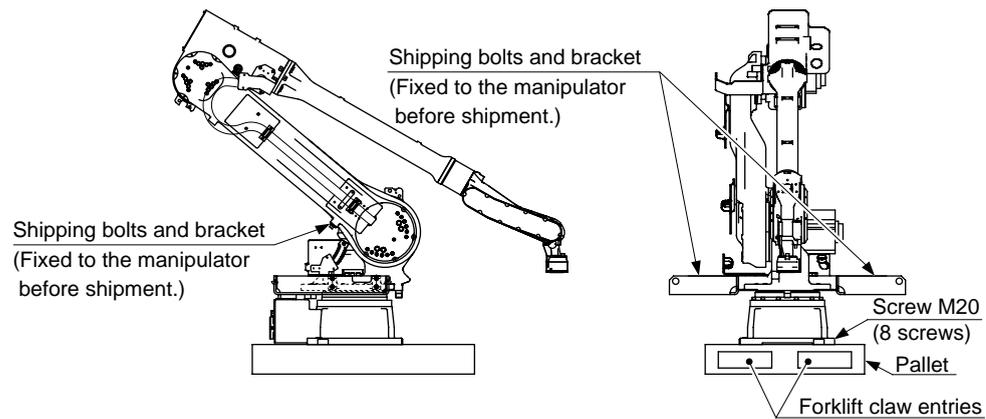

2.2 Shipping Bolts and Brackets

The manipulator is provided with shipping bolts and brackets . (See *fig. 2-1 "Transport Using a Crane" at page 2-2*)

The shipping bolts and brackets are painted yellow



Before turning ON the power, check to be sure that the shipping bolts and brackets are removed. The shipping bolts and brackets then must be stored for future use, in the event that the manipulator must be moved again.

3 Installation



WARNING

- Install the safeguarding.

Failure to observe this warning may result in injury or damage.

- Install the manipulator in a location where the tool or the workpiece held by its fully extended arm will not reach the wall, safeguarding, or controller.

Failure to observe this warning may result in injury or damage.

- Do not start the manipulator or even turn ON the power before it is firmly anchored.

The manipulator may overturn and cause injury or damage.



CAUTION

- Do not install or operate a manipulator that is damaged or lacks parts.

Failure to observe this caution may cause injury or damage.

- Before turning ON the power, check to be sure that the shipping bolts and brackets explained in *chapter 2 "Transport" at page 2-4* are removed.

Failure to observe this caution may result in damage to the driving parts.

3.1 Installation of Safeguarding

To insure safety, be sure to install the safeguarding. They prevent unforeseen accidents with personnel and damage to equipment. The following is quoted for your information and guidance.

Responsibility for Safeguarding (ISO 10218)

The user of a manipulator or robot system shall ensure that safeguarding is provided and used in accordance with Sections 6, 7, and 8 of this standard. The means and degree of safeguarding, including any redundancies, shall correspond directly to the type and level of hazard presented by the robot system consistent with the robot application. Safeguarding may include but not be limited to safeguarding devices, barriers, interlock barriers, perimeter guarding, awareness barriers, and awareness signals.

3.2 Mounting Procedures for Manipulator Base

The manipulator should be firmly mounted on a baseplate or foundation strong enough to support the manipulator and withstand repulsion forces during acceleration and deceleration.

Construct a solid foundation with the appropriate thickness to withstand maximum repulsion forces of the manipulator refer ring to *table 3-1 "Maximum Repulsion Force of the Manipulator at Emergency Stop"* and *table 3-2 "Endurance Torque in Operation"* .)

A baseplate flatness must be kept at 0.5 mm or less: insufficient flatness of installation surface may deform the manipulator shape and affect its functional abilities. Mount the manipulator bases as instructed in *chapter 3.2.1 "Mounting the Manipulator on the Baseplate"* or *chapter 3.2.2 "Mounting the Manipulator on the Floor"* at page 3-4.

Table 3-1: Maximum Repulsion Force of the Manipulator at Emergency Stop

Maximum torque in horizontal rotation (S-axis moving direction)	24500 N·m (2500 kgf·m)
Maximum torque in vertical rotation (LU-axis moving direction)	45080 N·m (4600 kgf·m)

Table 3-2: Endurance Torque in Operation

Endurance torque in horizontal operation (S-axis moving direction)	6125N·m (625 kgf·m)
Endurance torque in vertical operation (L-,U--axes moving direction)	11270 N·m (1150 kgf·m)

MA3100	3	Installation
	3.2	Mounting Procedures for Manipulator Base

3.2.1 Mounting the Manipulator on the Baseplate


For the first process, anchor the baseplate firmly to the ground. The baseplate should be rugged and durable to prevent shifting of the baseplate of 50 mm or more thick, and anchor bolts of M20 or larger size.

The manipulator base is tapped for eight mounting holes; securely fix the manipulator base to the baseplate with eight hexagon head screws M20 (70 mm long is recommended).

Next, fix the manipulator base to the baseplate. Tighten the hexagon head bolts and anchor bolts firmly so that they will not work loose during the operation.


Refer to *fig. 3-1 "Mounting the Manipulator on the Baseplate"*.

Fig. 3-1: Mounting the Manipulator on the Baseplate

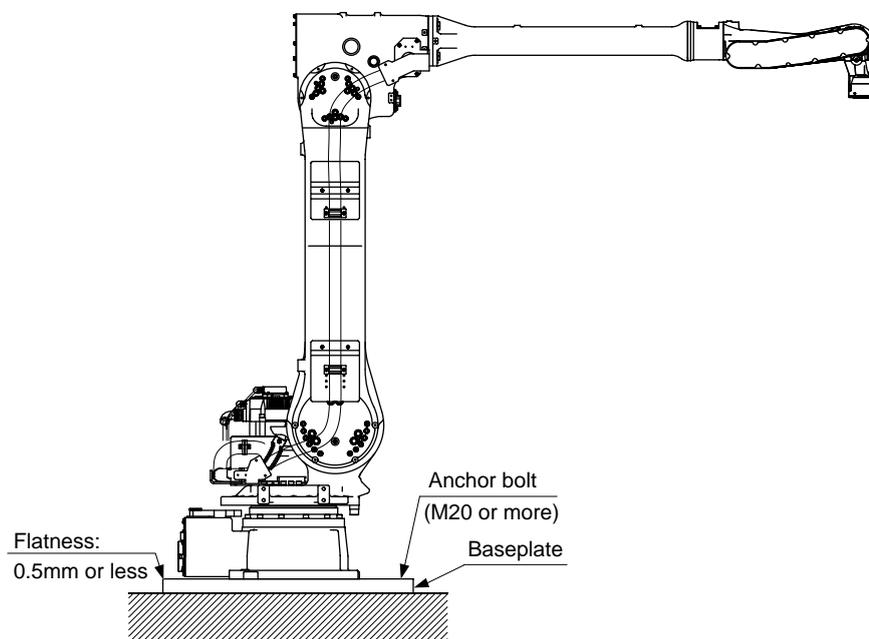

3.2.2 Mounting the Manipulator on the Floor

The floor should be strong enough to support the manipulator. Construct a solid foundation with the appropriate thickness to withstand maximum repulsion force of the manipulator shown in " Table 3-1 Maximum Repulsion Force of the Manipulator at Emergency Stop " As a rough standard, if there is a concrete thickness (floor) of 200 mm or more, the manipulator base can be fixed directly to the floor with anchor bolts M20. Before mounting the manipulator, however, check that the floor is level and that all cracks, etc. are repaired. Any thickness less than 200 mm is insufficient for mounting, even if the floor is concrete.

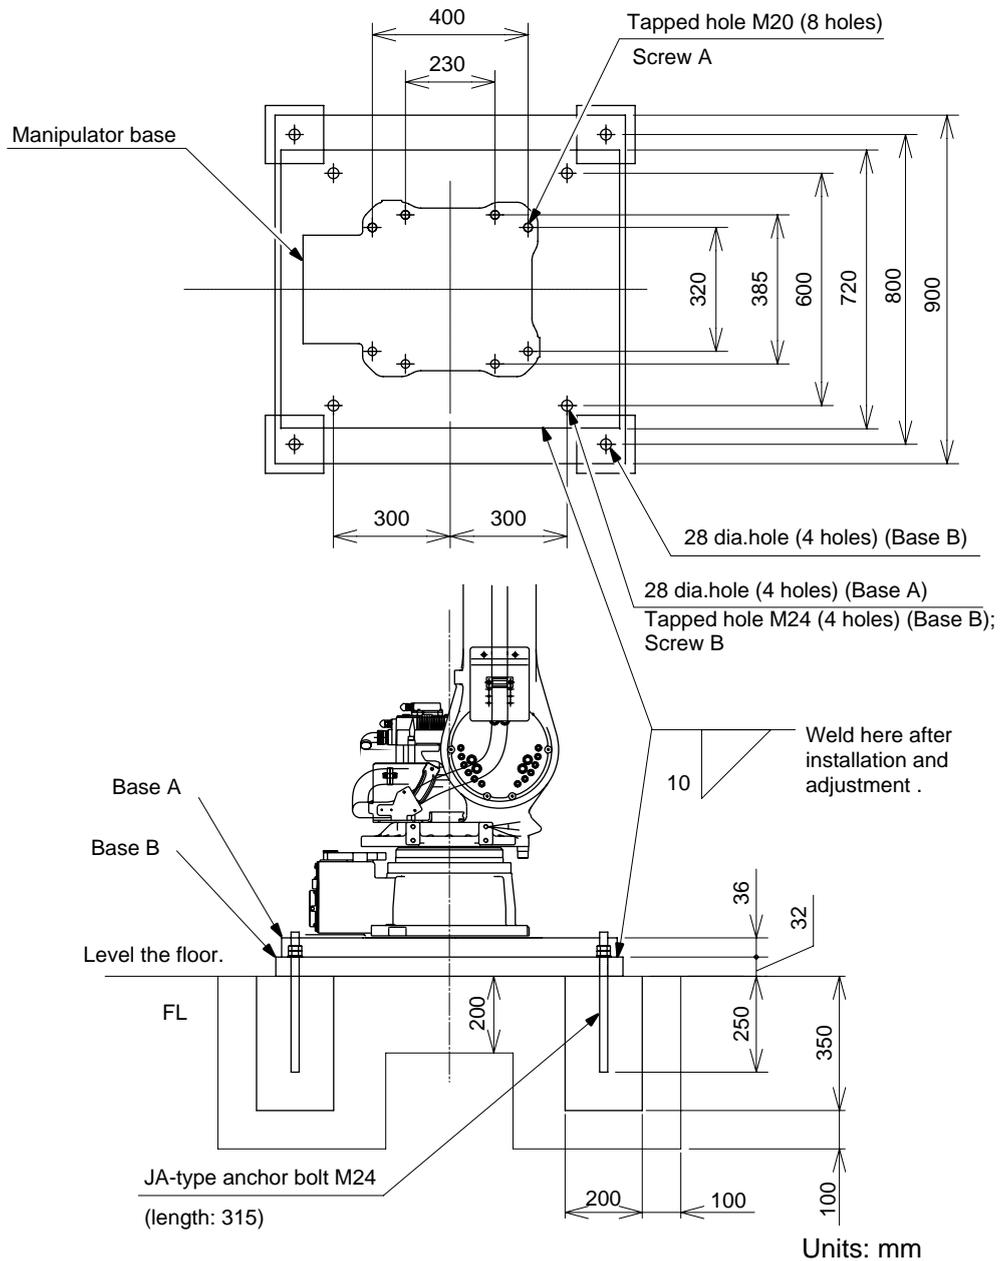

Screw A: Screw M20 (length: 70) (8 screws); spring washer, flat washer
 Screw B: Screw M24 (length: 70) (4 screws); spring washer
 The fixing screws and bases are to be prepared by customer.

3.3 Types of Mounting

The manipulator can be mounted in three different ways: floor-mounted (standard), and wall-mounted, and ceiling-mounted types are available. For wall-mounted and ceiling-mounted types, the three points listed below are different from the floor-mounted type.

- S-Axis Operating Range
- Processes in Fixing the Manipulator Base
- Precautions to Prevent the Manipulator from Falling

3.3.1 S-Axis Operating Range

In case of installing wall-mounted type, the S-axis operating range must be $\pm 30^\circ$. (Set before shipment.)

3.3.2 Processes in Fixing the Manipulator Base


In case of installing wall/ceiling-mounted types, be sure to use eight hexagon socket head cap screws M20. Use a torque of 402 N·m (41 kgf·m) when tightening the screws.

3.3.3 Precautions to Prevent the Manipulator from Falling

In case of installing wall/ceiling-mounted types, for safety purposes, take measures to keep the manipulator from falling.

Refer to " Fig. 3-2 Precautions to Prevent the Manipulator from Falling " for details.

Fig. 3-2: Precautions to Prevent the Manipulator from Falling

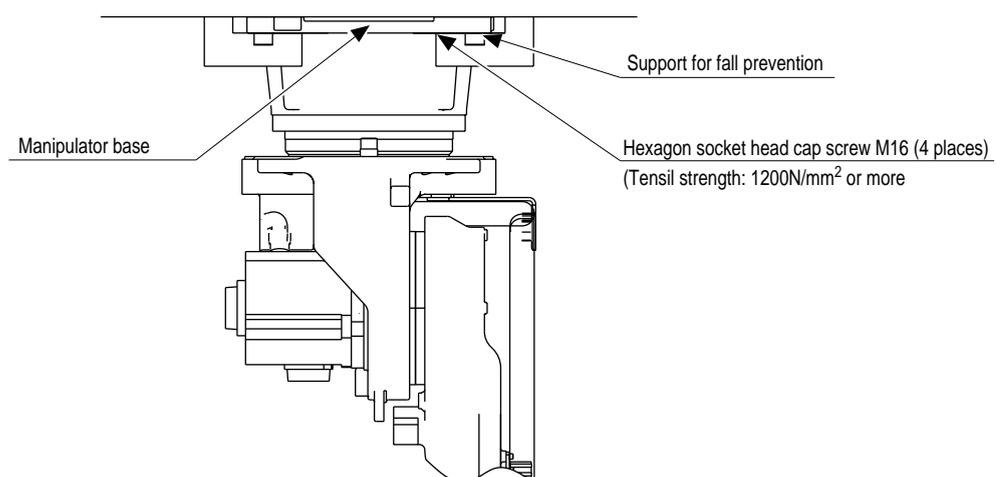

In case of using the wall/ceiling-mounted types, inform Yaskawa of the matter in an order placement. Be sure to contact your Yaskawa representative to execute wall/ceiling installations on site.

	3	Installation
MA3100	3.4	Notes on Mounting the Manipulators on the Ceiling


3.4 Notes on Mounting the Manipulators on the Ceiling

In the case if the manipulator shipped is the floor-mounted type, yet is to be mounted on the ceiling, mounting positions of each part on the view A in the figure below should be changed after installing the manipulator on the ceiling, to prevent a grease leakage from an air breather. Change the mounting positions of the parts as shown in the figure below.

After installing the manipulator on the ceiling, replace the positions of the parts installed in the LU-axes motor base, by switching the positions of the union and the hexagon socket head plug PT 1/8, and the positions of the grease cap and the air breather.

Replace the positions of the grease cap and the air breezer promptly, to prevent the grease leakage from a hole where a grease cap is to be installed.

Fig. 3-3: Parts Positions for Ceiling Mounted Manipulator

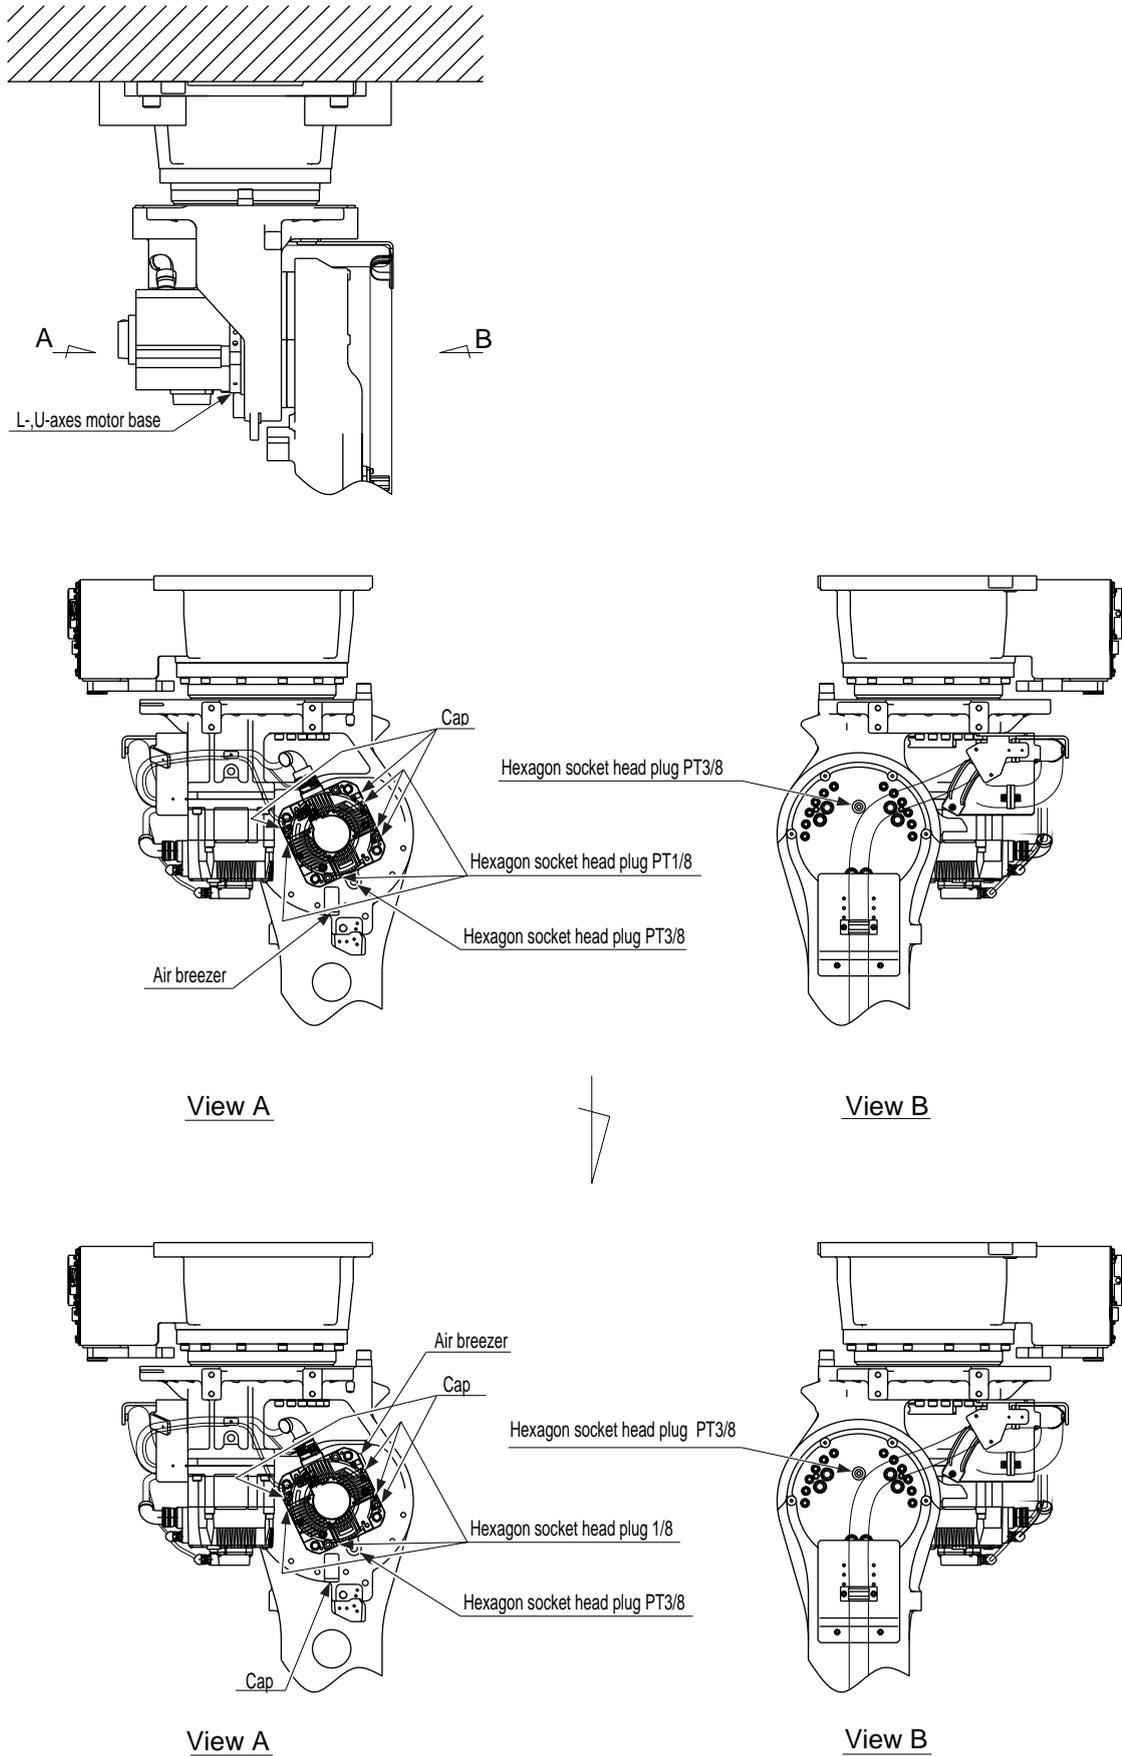

3.5 Location

When installing a manipulator, it is necessary to satisfy the following environmental conditions.

- Ambient temperature: 0° to 45°C
- Humidity: 20 to 80%RH (no-condensing)
- Free from exposure to dust, soot, oil, or water.
- Free from corrosive gas or liquid, or explosive gas or liquid
- Free from excessive vibration (Vibration acceleration: 4.9 m/s² [0.5 G] or less)
- Free from large electrical noise (plasma)
- Flatness for installation is 0.5 mm or less

4 Wiring



WARNING

- Ground resistance must be 100 Ω or less.
Failure to observe this warning may result in fire or electric shock.
- Before wiring, make sure to turn OFF the primary power supply, and put up a warning sign. (ex. DO NOT TURN THE POWER ON.)
Failure to observe this warning may result in fire or electric shock.



CAUTION

- Wiring must be performed by authorized or certified personnel.
Failure to observe this caution may result in fire or electric shock.

4.1 Grounding


Follow electrical installation standards and wiring regulations for grounding. A ground wire of 5.5 mm² or more is recommended.

Refer to *fig. 4-1 "Grounding Method"* at page 4-1 to connect the ground line directly to the manipulator.



- Do not use this wire sharing with other ground lines or grounding electrodes for other electric power, motor power, welding devices, etc.
- Where metal ducts, metallic conduits, or distributing racks are used for cable laying, ground in accordance with electrical installation standards.

Fig. 4-1: Grounding Method

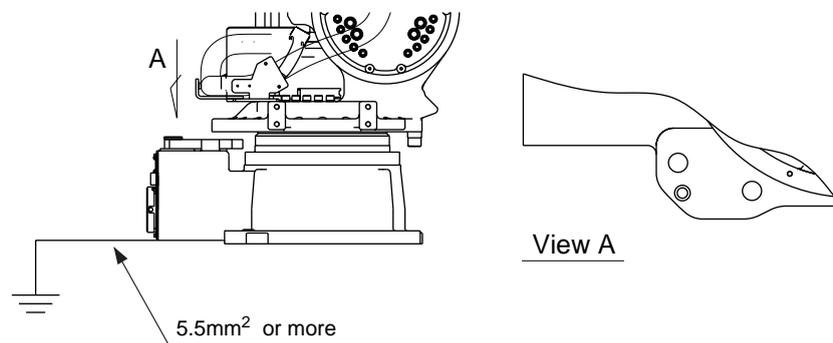

	4	Wiring
MA3100	4.2	Cable Connection

4.2 Cable Connection

Two manipulator cables are delivered with the manipulator: an encoder cable (1BC) and a power cable (2BC). (Refer to *fig. 4-2 “Manipulator Cables”* at page 4-3.)

Connect these cables to the connectors on the manipulator connector base and the DX100 board connectors. Refer to *fig. 4-3(a) “Manipulator Cable Connection (Manipulator Side)”* at page 4-4 and *fig. 4-3(b) “Manipulator Cable Connection (DX100 Side)”* at page 4-4.

4.2.1 Connection to the Manipulator

Before connecting two cables to the manipulator, verify the numbers on both manipulator cables and the connectors on the connector base of the manipulator. When connecting, adjust the cable connector positions to the main key positions of the manipulator, and insert cables in the order of 2BC, then 1BC. After inserting the cables, depress the lever until it clicks.

4.2.2 Connection to the DX100

Before connecting cables to the DX100, verify the numbers on both manipulator cables and the connectors on the DX100. When connecting, insert the cables in the order of X21, then X11, and depress each lever low until it clicks.

Fig. 4-2: Manipulator Cables

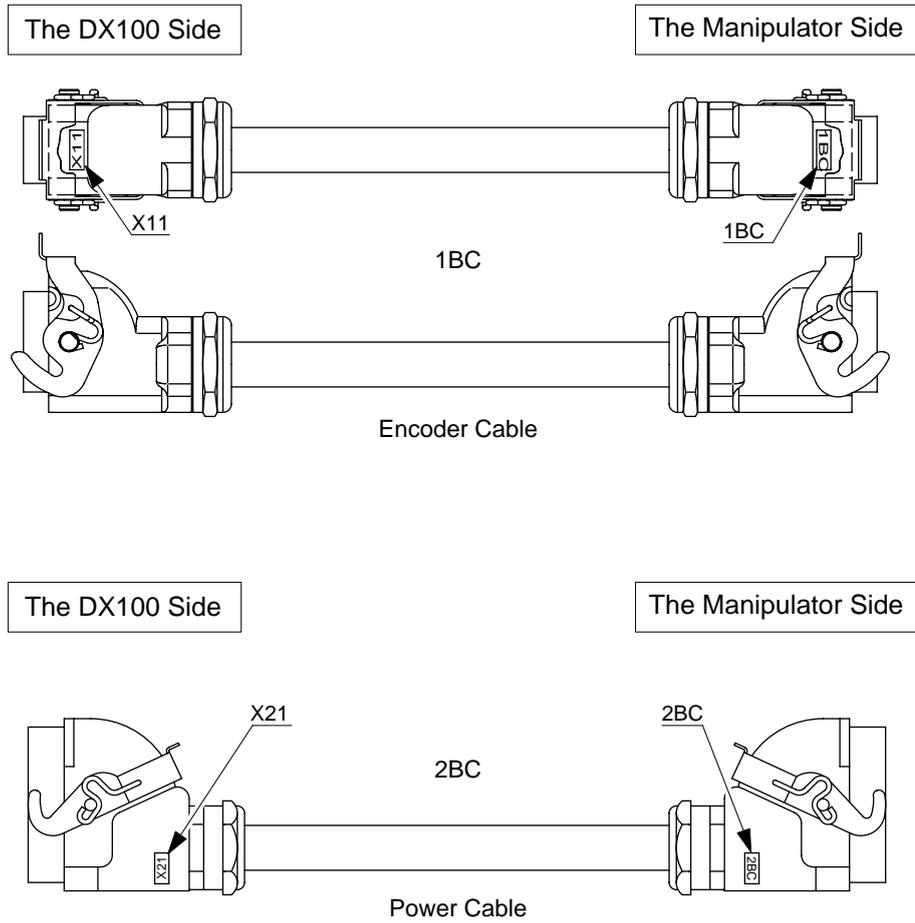


Fig. 4-3(a): Manipulator Cable Connection (Manipulator Side)


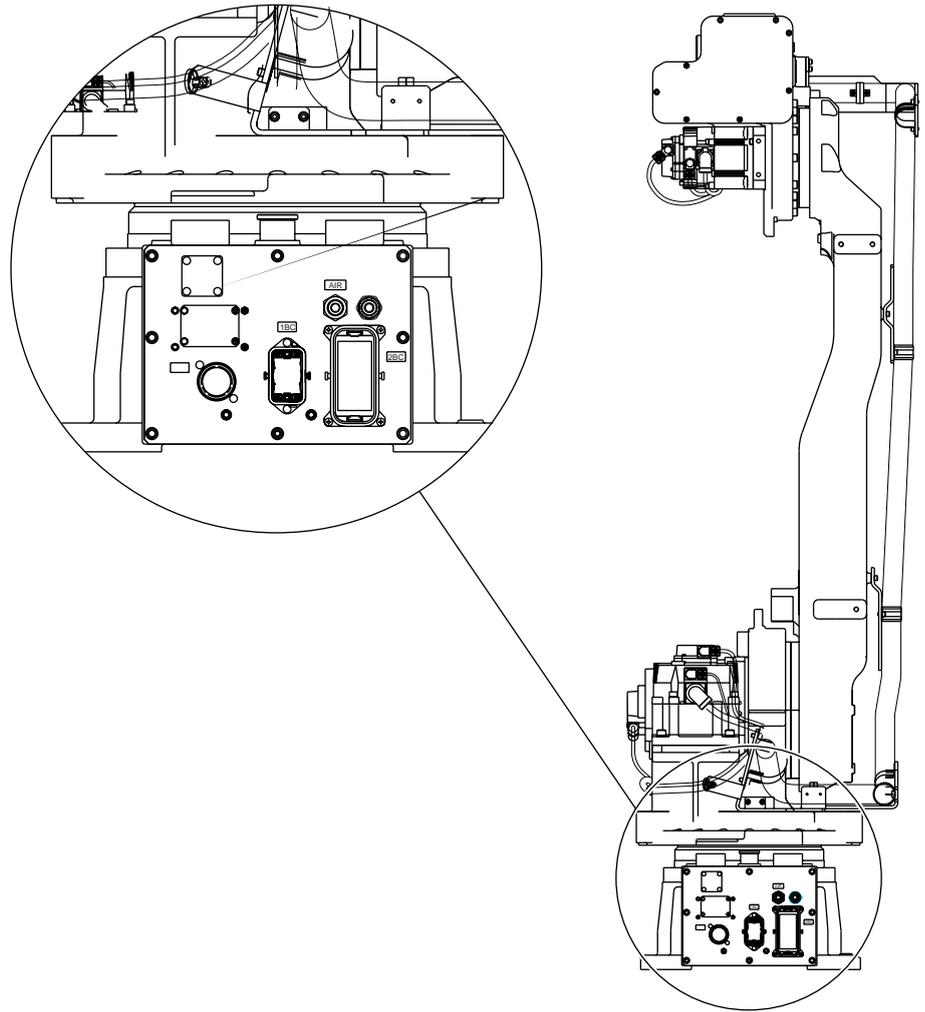


Fig. 4-3(b): Manipulator Cable Connection (DX100 Side)

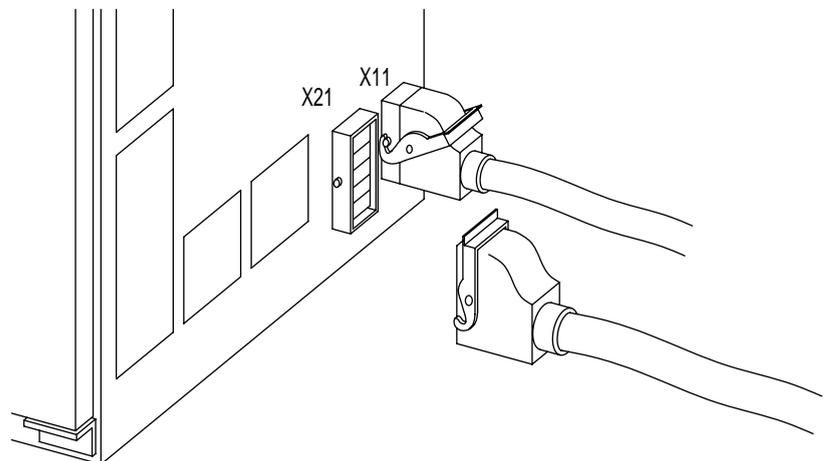

MA3100	5	Basic Specifications
	5.1	Basic Specifications

5 Basic Specifications

5.1 Basic Specifications

Table 5-1: Basic Specifications¹⁾

Item	Model	MOTOMAN-MA3100
Application		Spot Welding
Structure		Vertically Articulated
Degree of Freedom		6
Payload		3 kg
Repeatability ²⁾		±0.15mm
Range of Motion ³⁾	S-Axis (turning)	-180° – +180°
	L-Axis (lower arm)	-90° – +135°
	U-Axis (upper arm)	-160° – +251°
	R-Axis (wrist roll)	-150° – +150°
	B-Axis (wrist pitch/yaw)	-45° – +180°
	T- Axis (wrist twist)	-200° – +200°
Maximum Speed	S-Axis	3.14 rad/s, 180°/s
	L-Axis	3.11 rad/s, 178°/s
	U-Axis	3.11 rad/s, 178°/s
	R-Axis	6.98 rad/s, 400°/s
	B-Axis	7.16 rad/s, 410°/s
	T-Axis	10.65 rad/s, 610°/s
Allowable Moment ⁴⁾	R-Axis	8.8 N•m (0.9 kgf•m)
	B-Axis	8.8 N•m (0.9 kgf•m)
	T-Axis	2.9 N•m (0.3 kgf•m)
Approx. Mass		501 kg
Ambient Conditions	Temperature	0°C to 45°C
	Humidity	20 to 80% RH at constant temperature
	Vibration Acceleration	Less than 4.9 m/s ² (0.5 G)
	Others	Free from corrosive gas or liquid, or explosive gas. Free from water, oil, or dust. Free from excessive electrical noise (plasma).
Power Requirements		2.5 kVA

1 SI units are used in this table. However, gravitational unit is used in ().


2 Conformed to ISO09283

3 For the limit switch specification (type: MA03100-A01), the range of motion is limited with switch before shipment.

4 Refer to *chapter 6.1 "Allowable Wrist Load"* at page 6-1 in *chapter 6 "Allowable Load for Wrist Axis and Wrist Flange"* at page 6-1 for details on the permissible moment of inertia.


5.2 Part Names and Working Axes

Fig. 5-1: Part Names and Working Axes

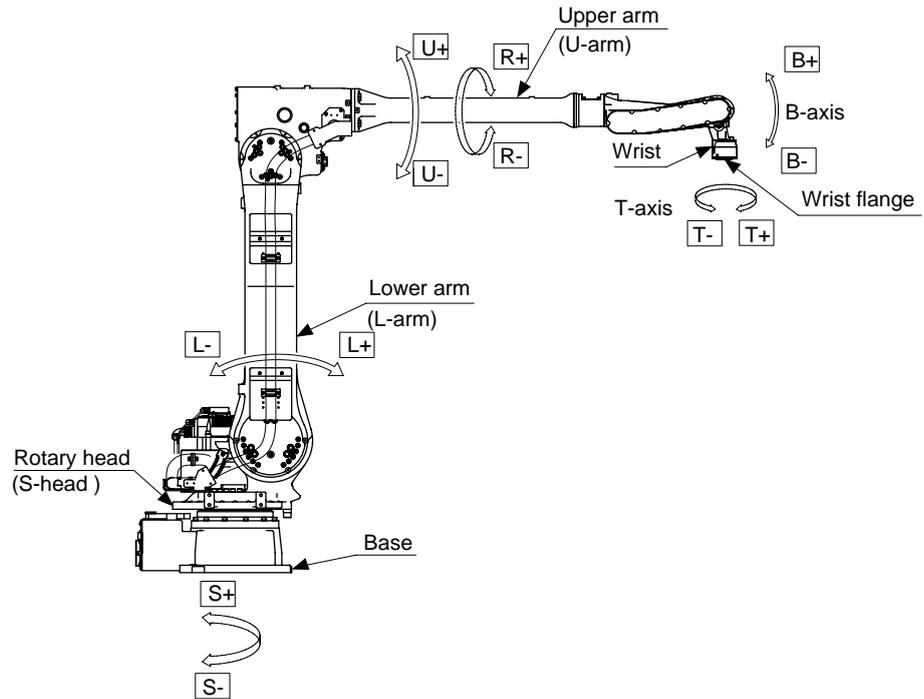


5.3 Manipulator Base Dimensions

Fig. 5-2: Manipulator Base Dimensions

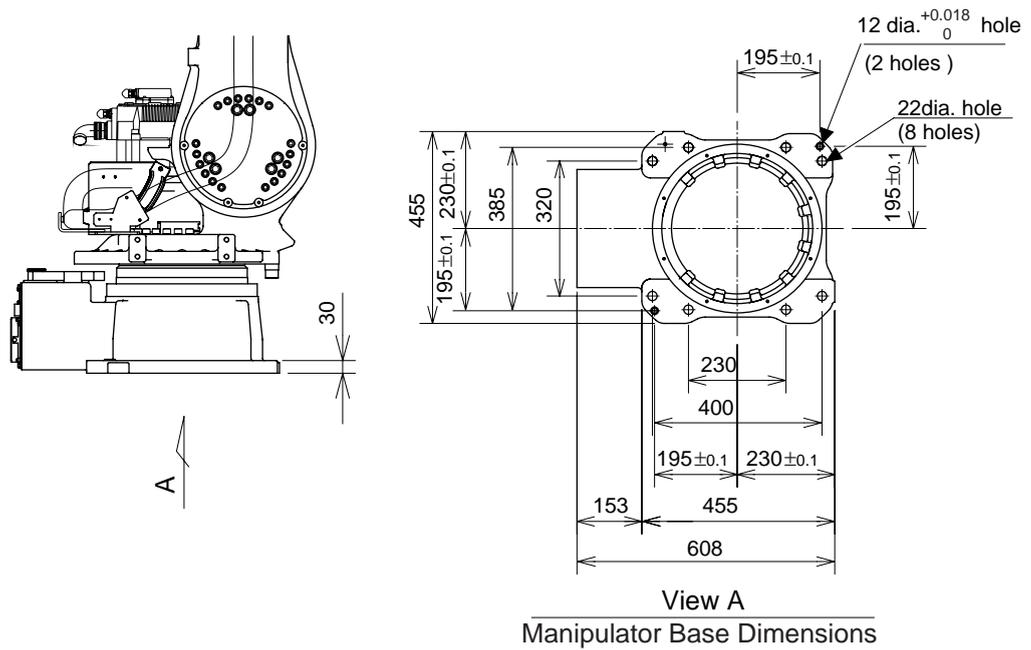

5.4 Dimensions and P-Point Maximum Envelope

Fig. 5-3: Dimensions and P-Point Maximum Envelope

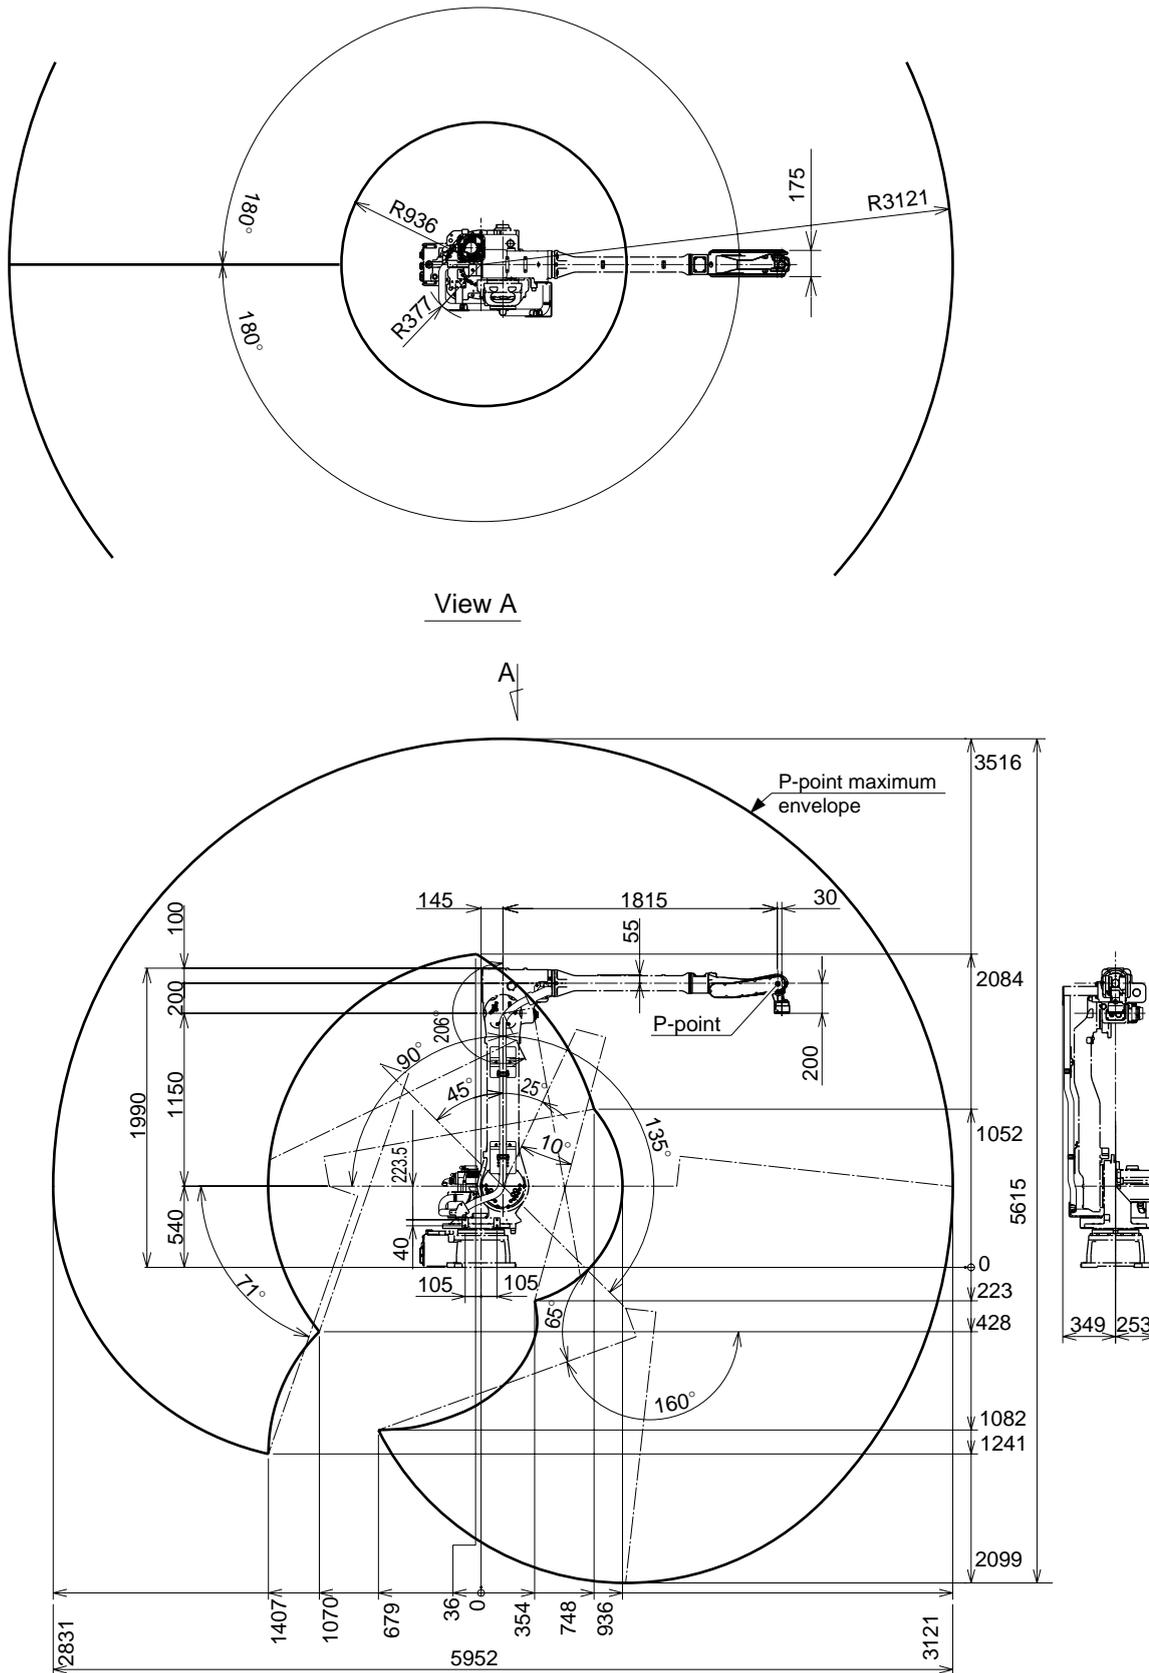

	5	Basic Specifications
MA3100	5.5	Alterable Operating Range

5.5 Alterable Operating Range

The operating range of the S-axis can be altered in accordance with the operating conditions as shown in *fig. 5-2 "S-Axis Operating Range"*. If alteration is necessary, contact your Yaskawa representative in advance.

Table 5-2: S-Axis Operating Range

Item	Specifications
S-Axis Operating Range	-180° – +180° (standard)
	-165° – +165°
	-150° – +150°
	-135° – +135°
	-120° – +120°
	-105° – +105°
	-90° – +90°
	-75° – +75°
	-60° – +60°
	-45° – +45°
	-30° – +30°
	-15° – +15°

6 Allowable Load for Wrist Axis and Wrist Flange

6.1 Allowable Wrist Load

The allowable wrist load is 3 kg maximum. If force is applied to the wrist instead of the load, force on R-, B-, and T-axes should be within the value shown in *table 6-1 "Allowable Wrist Load"*. Contact your Yaskawa representative for further information or assistance.

Table 6-1: Allowable Wrist Load


Axis	Moment N•m (kgf•m) ¹	GD ² /4 Total Moment of Inertia kg•m ²
R-Axis	8.8 (0.9)	0.27
B-Axis	8.8 (0.9)	0.27
T-Axis	2.9 (0.3)	0.03

1 (): Gravitational unit

When the volume load is small, refer to the moment arm rating shown in *fig. 6-1 "Moment Arm Rating"*.

The allowable total moment of inertia is calculated when the moment is at the maximum. Contact your Yaskawa representative beforehand when only moment of inertia, or load moment is small and moment of inertia is large. Also, when the load mass is combined with an outside force, contact your Yaskawa representative beforehand.


Fig. 6-1: Moment Arm Rating

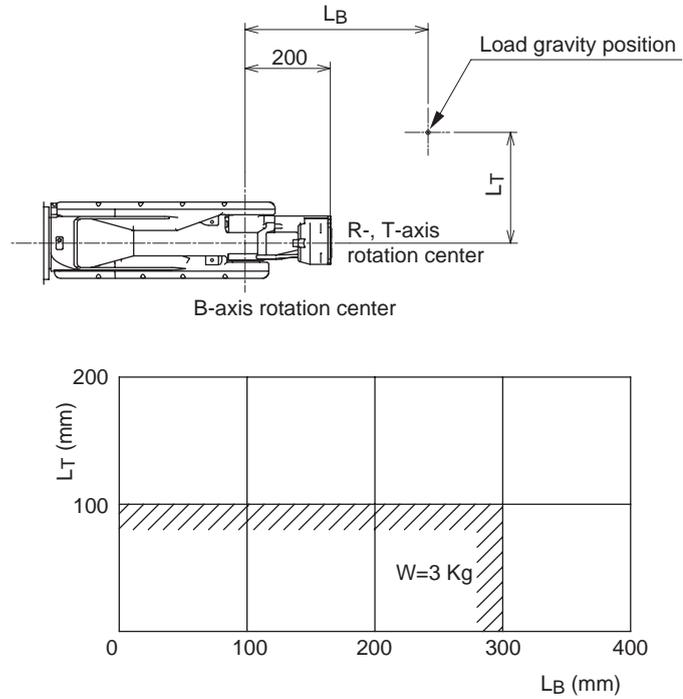

6.2 Wrist Flange

1. The wrist flange dimensions are shown in *fig. 6-2 "Wrist Flange"*. It is recommended that the attachment be mounted inside the fitting in order to identify the alignment marks. Fitting depth shall be 6 mm or less. As shown in the figure below, the attachment shall be mounted on the range of 90 diameter or less with up to 5 mm height from the flange face.

Fig. 6-2: Wrist Flange

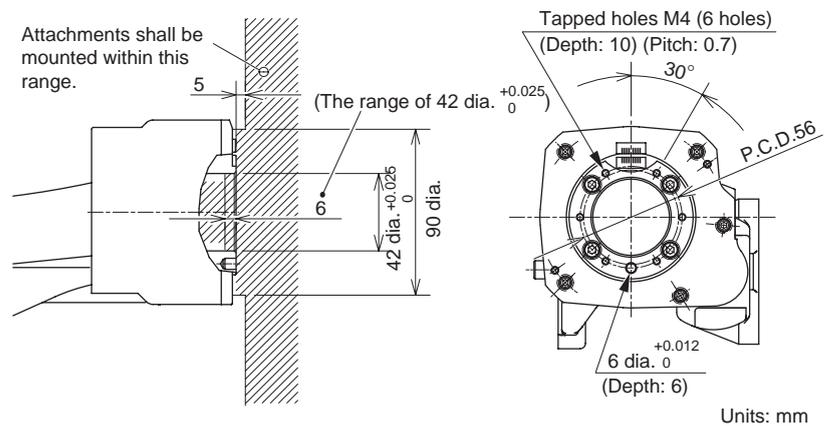

NOTE Wash off anti-corrosive paint (yellow) on the wrist flange surface with thinner or light oil before mounting the tools.

7 System Application

7.1 Peripheral Equipment Mounts

The peripheral equipment mounts are provided on the U-axis (upper arm) as shown in *fig. 7-1 "Installing Peripheral Equipment"* for easier installation of the users's system applications. The following conditions (*table 7-1 "Constraint for Attaching"* at page 7-2) shall be observed to attach or install peripheral equipment.

Fig. 7-1: Installing Peripheral Equipment

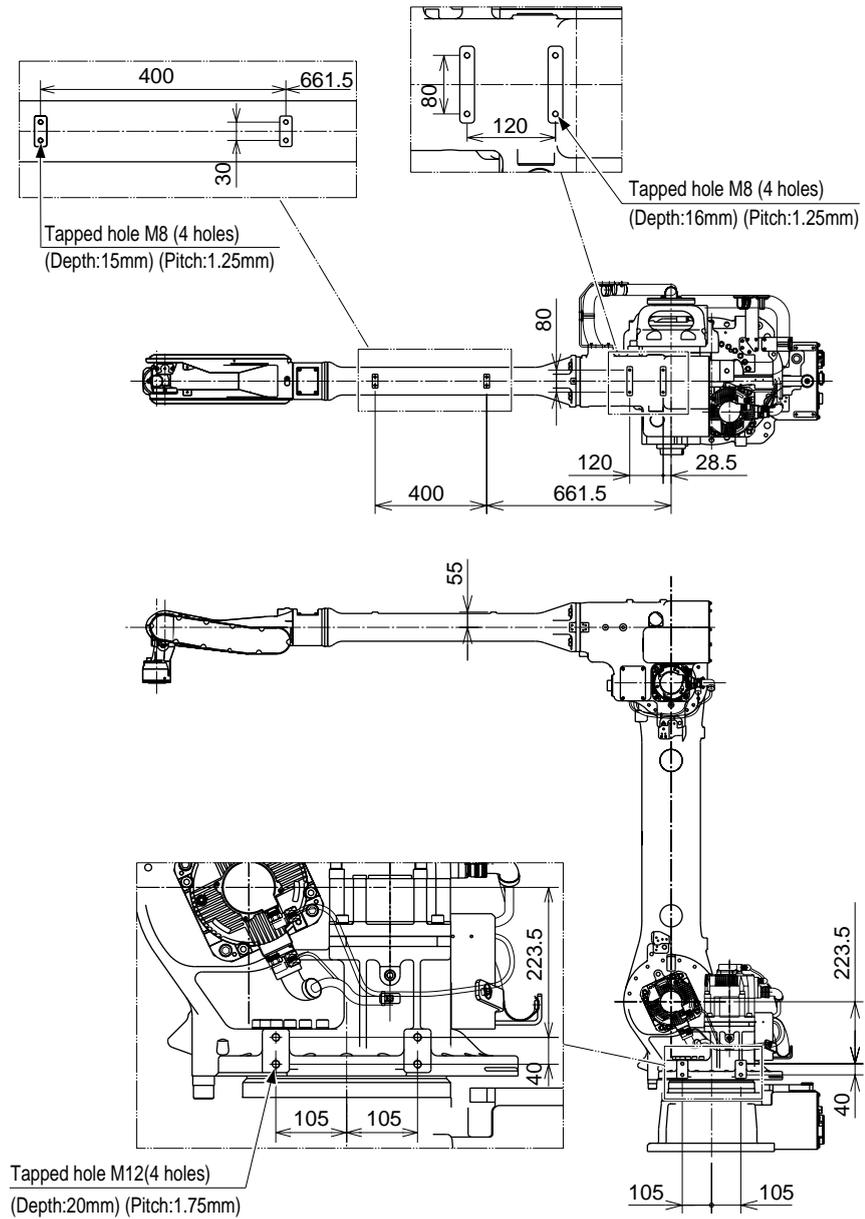


Table 7-1: Constraint for Attaching

Section	Application	Note
A	Cable processing	Up to 20 kg for attaching load mass including wrist load.
B	Cable processing and valve load	Up to 10 kg. 49 N•m (5 kgf•m) max. for increased moment amount of upper arm (Floor-, ceiling-mounted type only)
C	Transfer, etc. load	Up to 30 kg (Floor-, ceiling-mounted type only)



7.2 Internal User I/O Wiring Harness and Air Lines

Internal user I/O wiring harness (0.5 mm² x 23 wires) and an air line are incorporated in the manipulator for the drive of peripheral devices mounted on the upper arm as shown in *fig. 7-2 "Connectors for Internal User I/O Wiring Harness and Air Lines"*

The *fig. 7-2 "Connectors for Internal User I/O Wiring Harness and Air Lines"* also shows the connector pin (1 to 23) assignment. Perform wiring referring to the figure and the conditions below.

Items	Conditions
The allowable current for internal user I/O wiring harness	5.1A or less per a wire. The total current value for pins 1 to 23 must be 34.5 A or less.
The maximum pressure for the air line	490 kPa (5 kgf/cm ²) or less (The air line inside diameter: 8 mm.)

Fig. 7-2: Connectors for Internal User I/O Wiring Harness and Air Lines

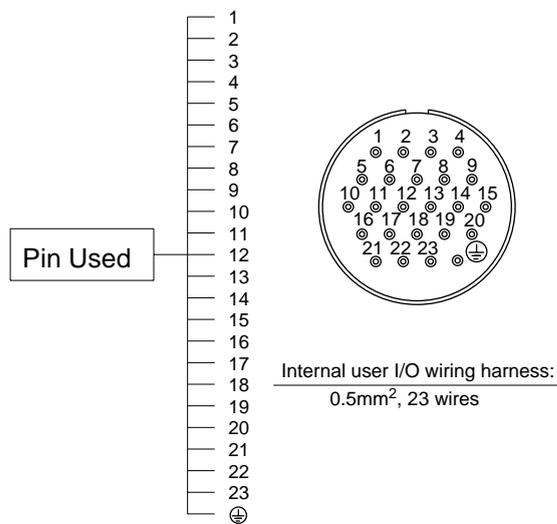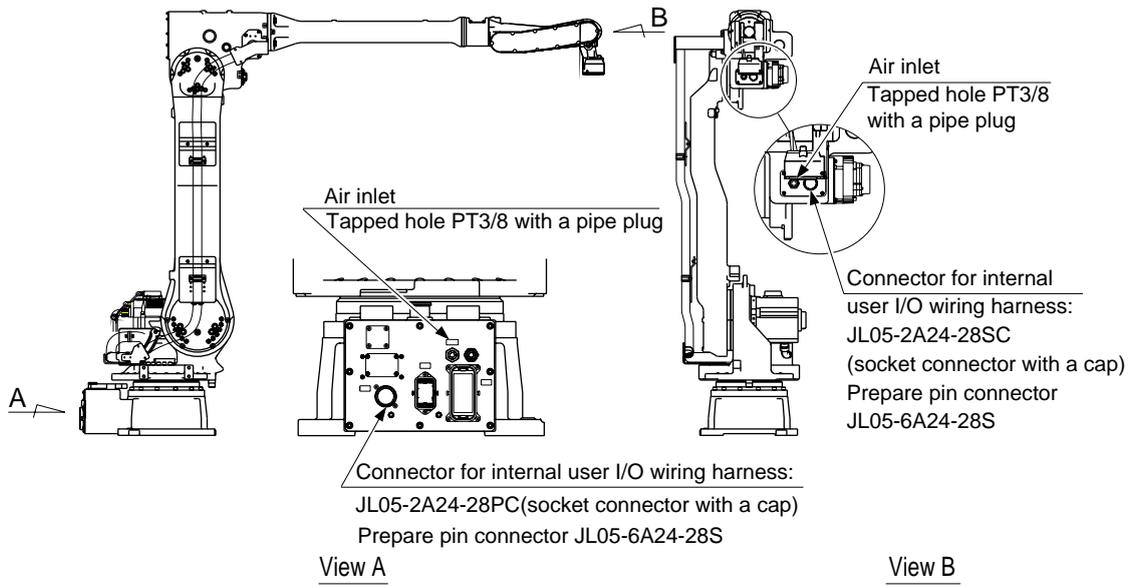

Pin Details for Internal User I/O Wiring Harness


The same numbered pins (1 to 23) on the two connectors are connected with a single lead wire of 0.5 mm².

8 Electrical Equipment Specification

8.1 Position of Limit Switch

The limit switches are optional. See *fig. 8-1 "location of Limit Switches"*. The manipulator with S- and L-axis overrun limit switches, and L-, U-axes interference limit switches are the type YR-MH03100-A01 only.

Fig. 8-1: location of Limit Switches

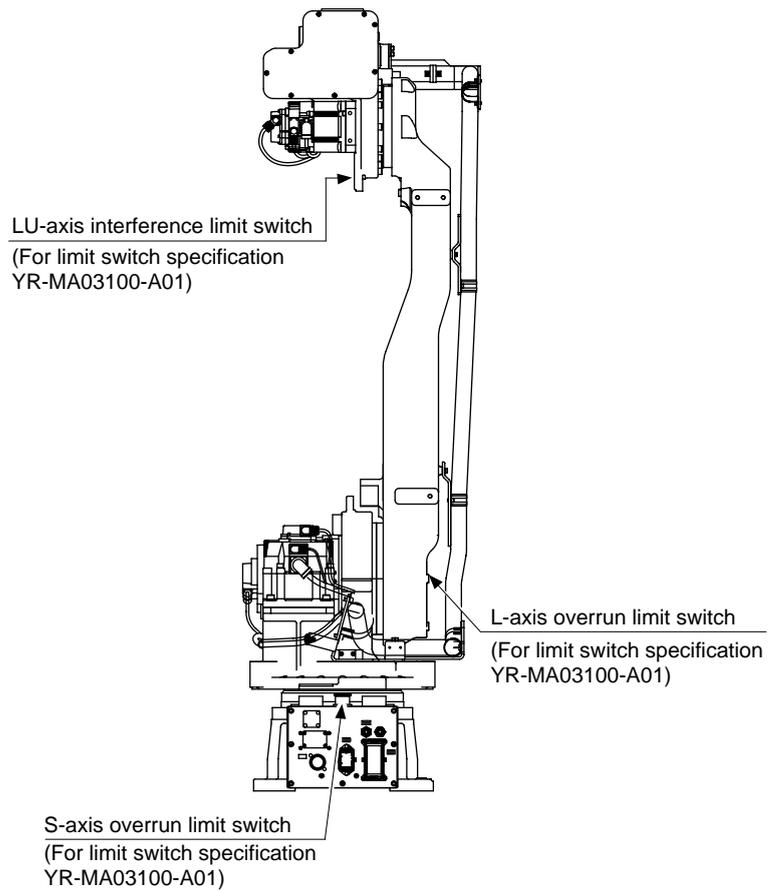

8.2 Internal Connections

Highly reliable connectors are equipped on each connection part of the manipulator to enable easy removal and installation for maintenance and inspection.

For the numbers, types, and locations of connectors, see *fig. 8-2* "Location and Numbers of Connectors" and *table 8-1* "List of Connector Types".

Fig. 8-2: Location and Numbers of Connectors

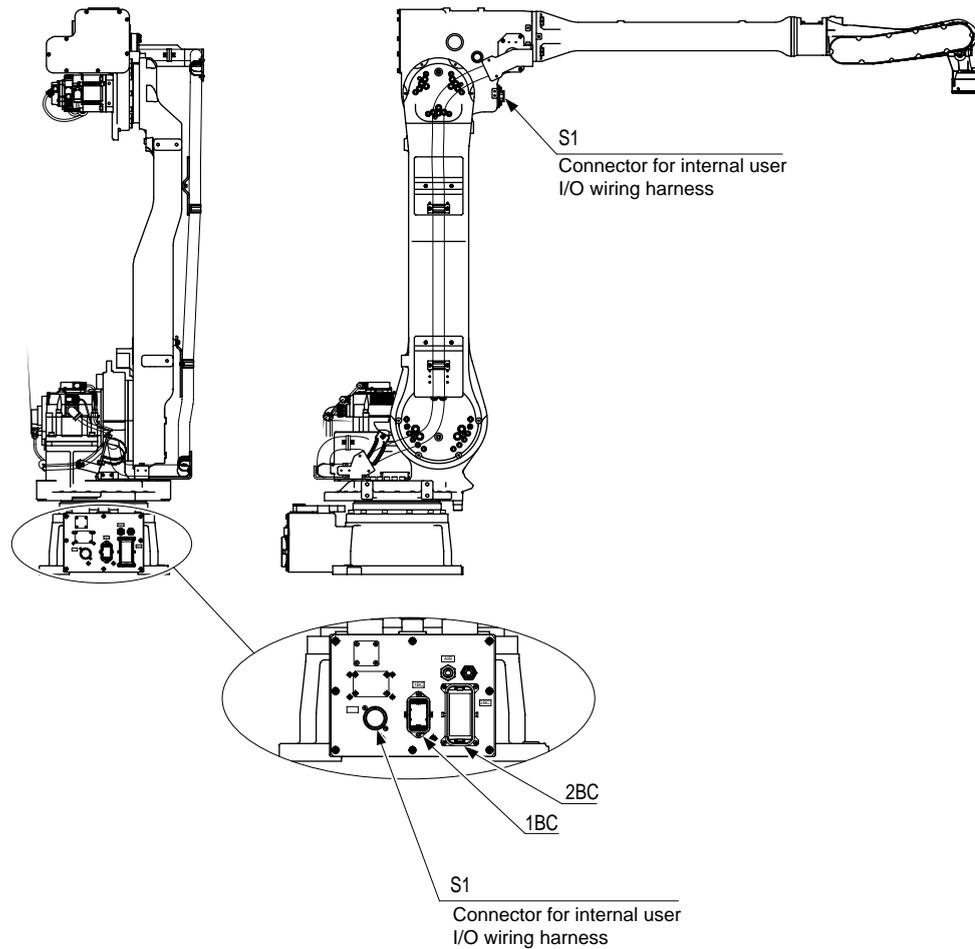


Table 8-1: List of Connector Types

Name	Type of Connector
Connector for the internal user I/O wiring harness on the connector base	JL05-2A24-28PC (JL05-6A24-28S:Optional)
Connector for the internal user I/O wiring harness on U-arm	JL05-2A24-28SC (JL05-6A24-28P:Optional)

Fig. 8-3(a): Internal Connection Diagram


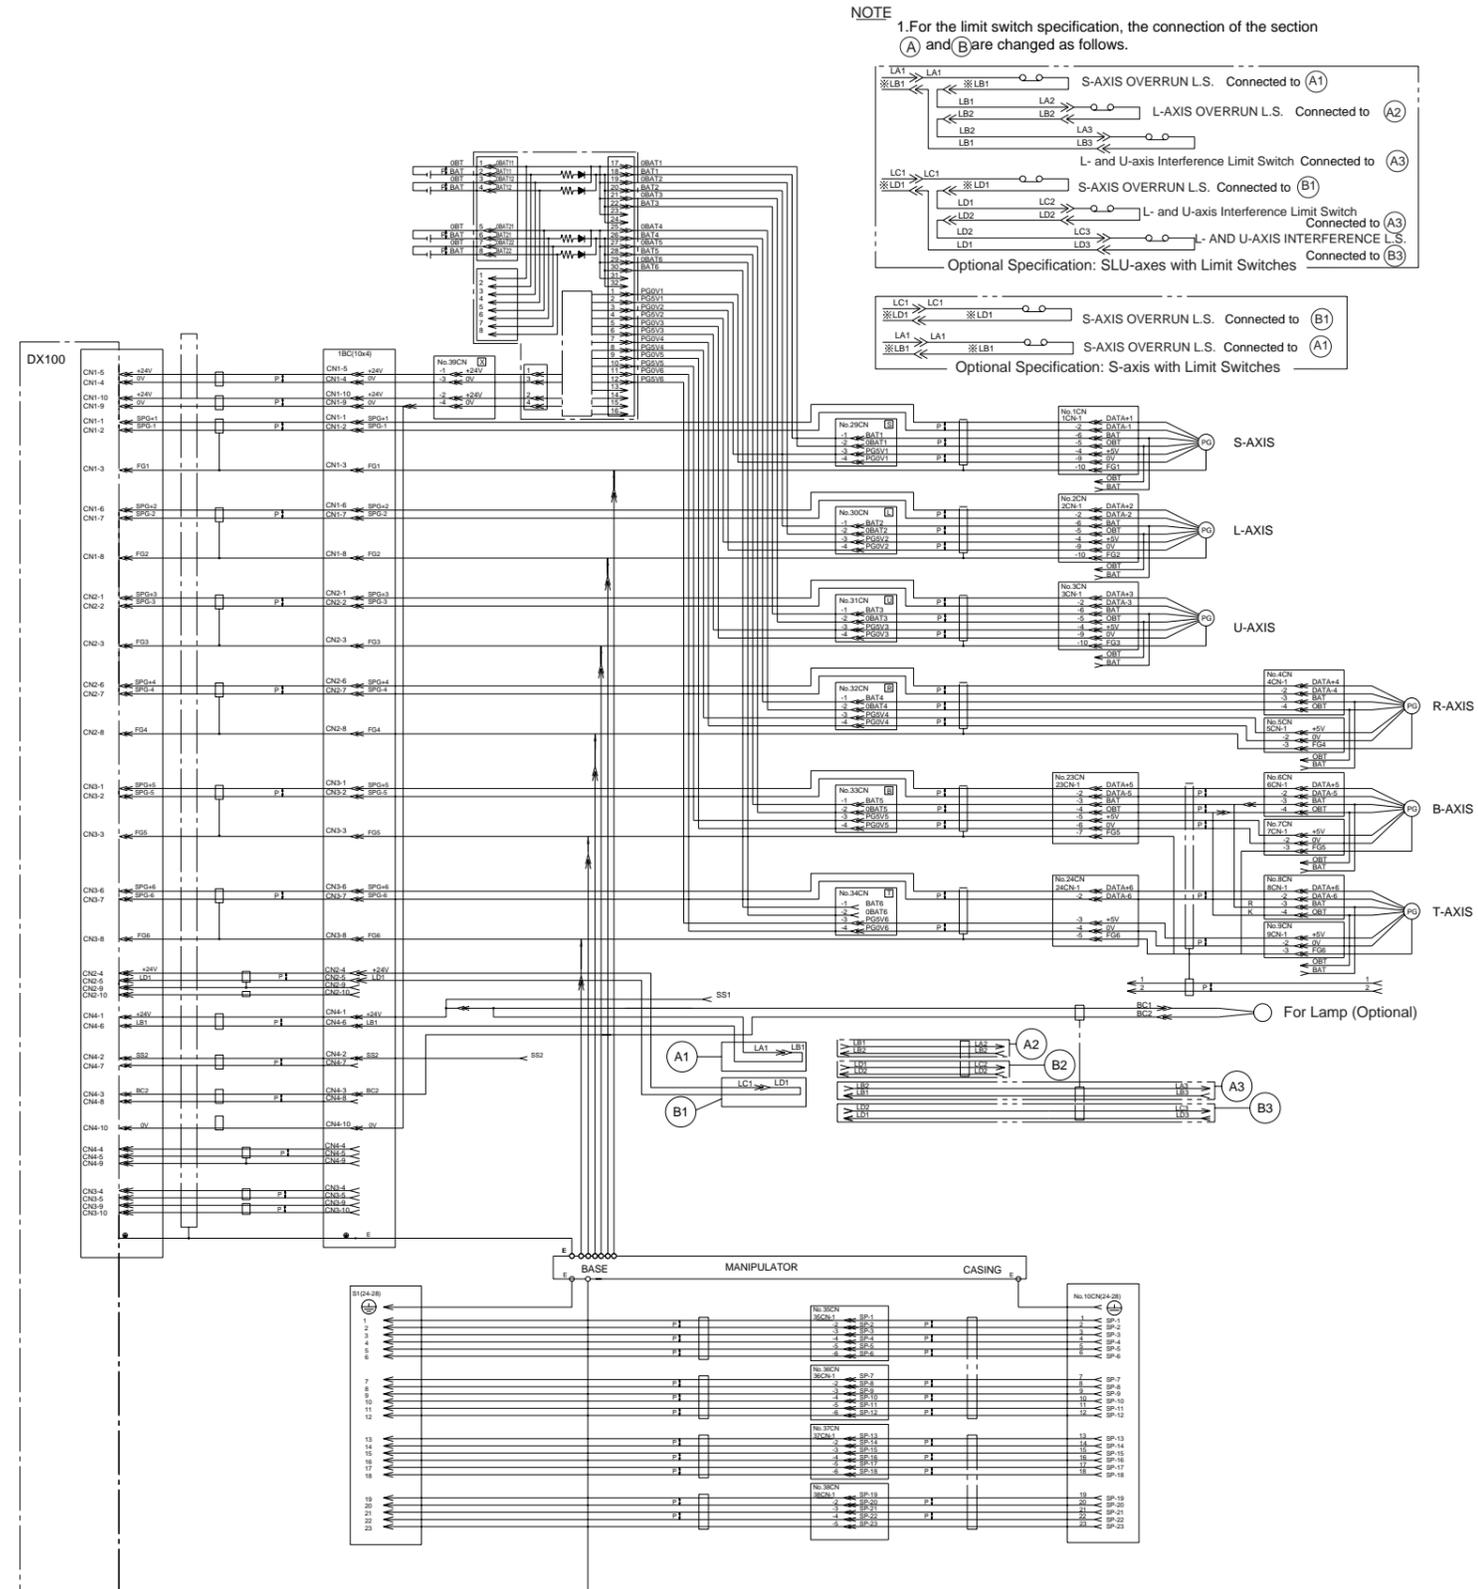


Fig. 8-3(b): Internal Connection Diagram



9 Maintenance and Inspection

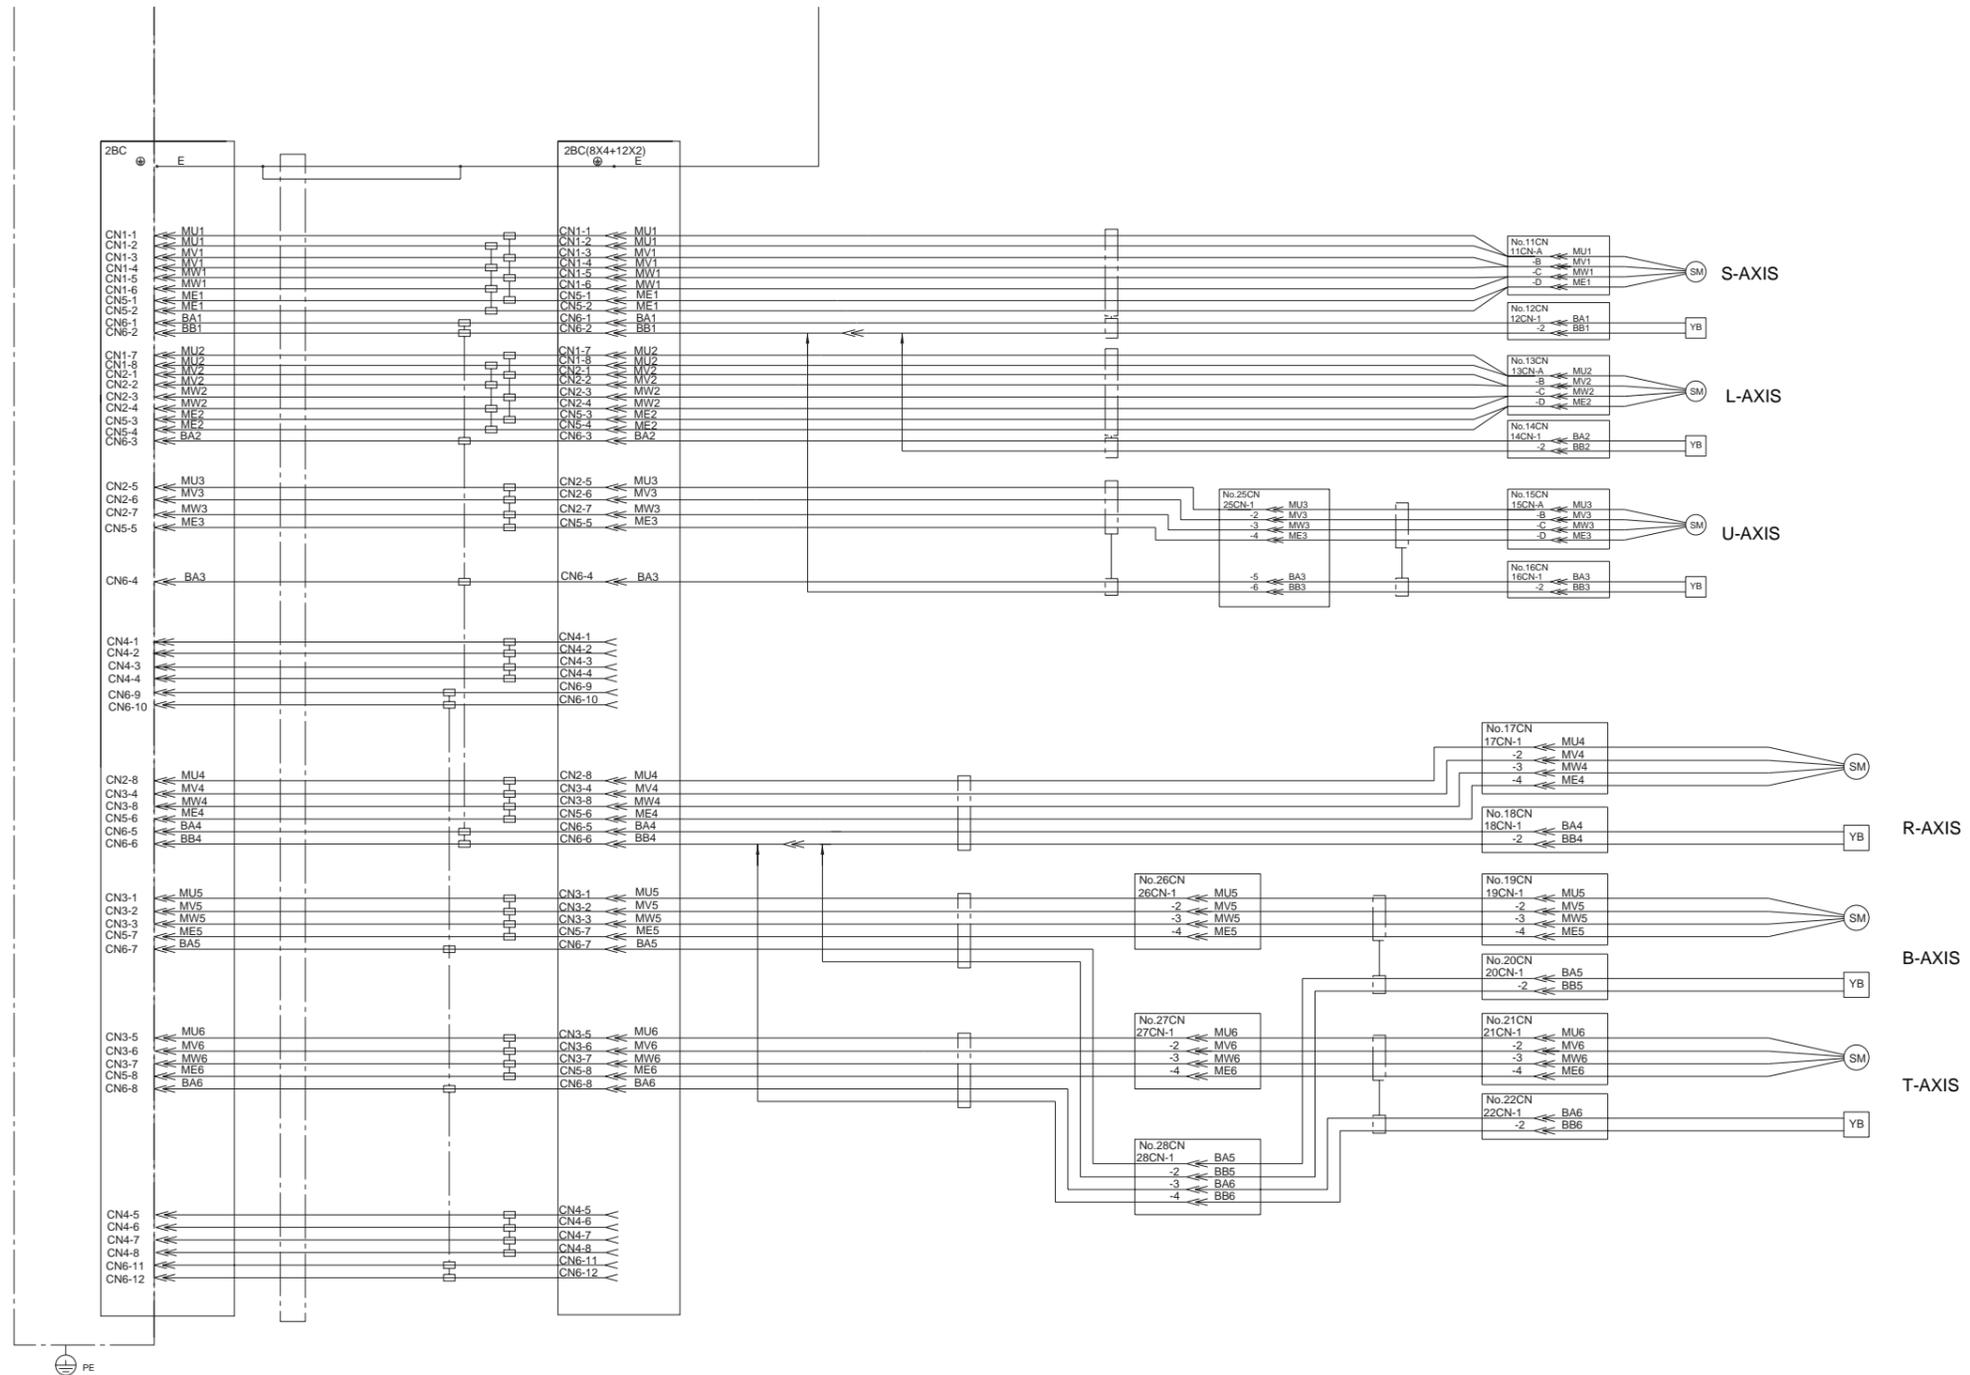

WARNING

- Before maintenance or inspection, be sure to turn OFF the main power supply, and put up a warning sign. (ex. DO NOT TURN THE POWER ON.)

Failure to observe this warning may result in electric shock or injury.



CAUTION

- Maintenance and inspection must be performed by specified personnel.

Failure to observe this caution may result in electric shock or injury.

- For disassembly or repair, contact your Yaskawa representative.
- Do not remove the motor, and do not release the brake.

Failure to observe this caution may result in injury from unexpected turning of the manipulator's arm.

- The battery pack must be connected before removing encoder connector when maintenance and inspection.

Failure to observe this caution may result in the loss of home position data.

9.1 Inspection Schedule

Proper inspections are essential not only to assure that the mechanism will be able to function for a long period, but also to prevent malfunctions and assure safe operation. Inspection intervals are classified into six levels as shown in *table 9-1 "Inspection Items" at page 9-2*.

In *table 9-1 "Inspection Items" at page 9-2*, the inspection items are categorized by three types of operations: operations which can be performed by personnel authorized by the user, operations to be performed by trained personnel, and operations to be performed by service company personnel. Only specified personnel shall perform the inspection work.



- The inspection interval depends on the total servo operation time.
- If axes are used very frequently (in handling applications, etc.), inspections may be required at shorter intervals. Contact your Yaskawa representative.

Table 9-1: Inspection Items (Sheet 1 of 2)

Items ¹⁾	Schedule						Method	Operation	Inspection Charge		
	Daily	1000HCycle	6000HCycle	12000HCycle	24000H	36000H			Specified Personnel	Licensee	Service Company
1	●						Visual	Check alignment mark accordance and damage at the home position.	●	●	●
2	●						Visual	Check for damage and deterioration of leads.	●	●	●
3	●						Visual	Clean the work area if dust or spatter is present. Check for damage and outside cracks.	●	●	●
4	●						Visual	Check for grease leakage. ²⁾	●	●	●
5		●					Spanner	Tighten loose bolts. Replace if necessary.	●	●	●
6		●					Screwdriver, Wrench	Tighten loose bolts. Replace if necessary.	●	●	●
7		●					Manual	Check for loose connectors and tighten if necessary.	●	●	●
8		●					Manual	Check for loose connectors.	●	●	●
9					●		Manual	Check for belt tension and wear.		●	●
10				●			Visual Multimeter	Check for conduction between the main connector of base and intermediate connector with manually shaking the wire. Check for wear of protective spring. ³⁾		●	●
								Replace in every 24000H.			●
11				●			Visual Multimeter	Check for conduction between the connectors. Check for wear of protective spring			●
								Replace in every 24000H.			●
12			●				Screwdriver, Wrench, Multimeter	Check for stain, damage, and looseness. Tighten and check the dog movement.		●	●
13								Replace the battery pack when the battery alarm occurs or the manipulator drove for every 36000H.		●	●

Table 9-1: Inspection Items (Sheet 2 of 2)

Items ¹⁾	Schedule					Method	Operation	Inspection Charge		
	Daily	1000HCycle	6000HCycle	12000HCycle	2400H			3600H	Specified Personnel	Licensee
14 S-axis speed reducer		●	●	●		Grease Gun	Check for malfunction ⁴⁾ . (Replace if necessary.) Supply grease ⁵⁾ . (6000H cycle). Replace grease ⁵⁾ . (12000H cycle). See chapter 9.3.1	●	●	●
15 LU-axes speed reducers		●	●	●		Grease Gun	Check for malfunction ⁴⁾ . (Replace if necessary.) Supply grease ⁵⁾ . (6000H cycle). Replace grease ⁵⁾ . (12000H cycle). See chapter 9.3.2 and chapter 9.3.3	●	●	●
16 RB-axes speed reducers		●	●	●		Grease Gun	Check for malfunction ⁴⁾ . (Replace if necessary.) Supply grease ⁵⁾ . (6000H cycle). Replace grease ⁵⁾ . (12000H cycle). See chapter 9.3.4	●	●	●
17 T-axis gears		●	●	●		Grease Gun	Check for malfunction ⁴⁾ . (Replace if necessary.) Supply grease ⁵⁾ . (6000H cycle). Replace grease ⁵⁾ . (12000H cycle). See chapter 9.3.5	●	●	●
18 R-axis tapered roller bearing		●	●	●		Grease Gun	Check for malfunction ⁴⁾ . (Replace if necessary.) Supply grease ⁵⁾ . (6000H cycle). See chapter 9.3.7	●	●	●
19 Overhaul					●					●

1 Inspection No. correspond to the numbers in fig. 9-1 "Inspection Parts and Inspection Numbers" at page 9-4.
 2 The occurrence of a grease leakage indicates the possibility that grease has seeped into the motor. This can cause a motor breakdown. Contact your Yaskawa representative.
 3 When checking for conduction with multimeter, connect the battery to "BAT" and "OBT" of connectors on the motor side for each axis, and then remove connectors on detector side for each axis from the motor. Otherwise, the home position may be lost. (Refer to chapter 9.3.8 "Notes for Maintenance" at page 9-18.)
 4 The application that requires highly frequent operation such as handling may cause grease leakage of air breather or the internal pressure rise of speed reducer. Contact your Yaskawa representative.
 5 For grease, refer to table 9-2 "Inspection Parts and Grease Used".

Fig. 9-1: Inspection Parts and Inspection Numbers

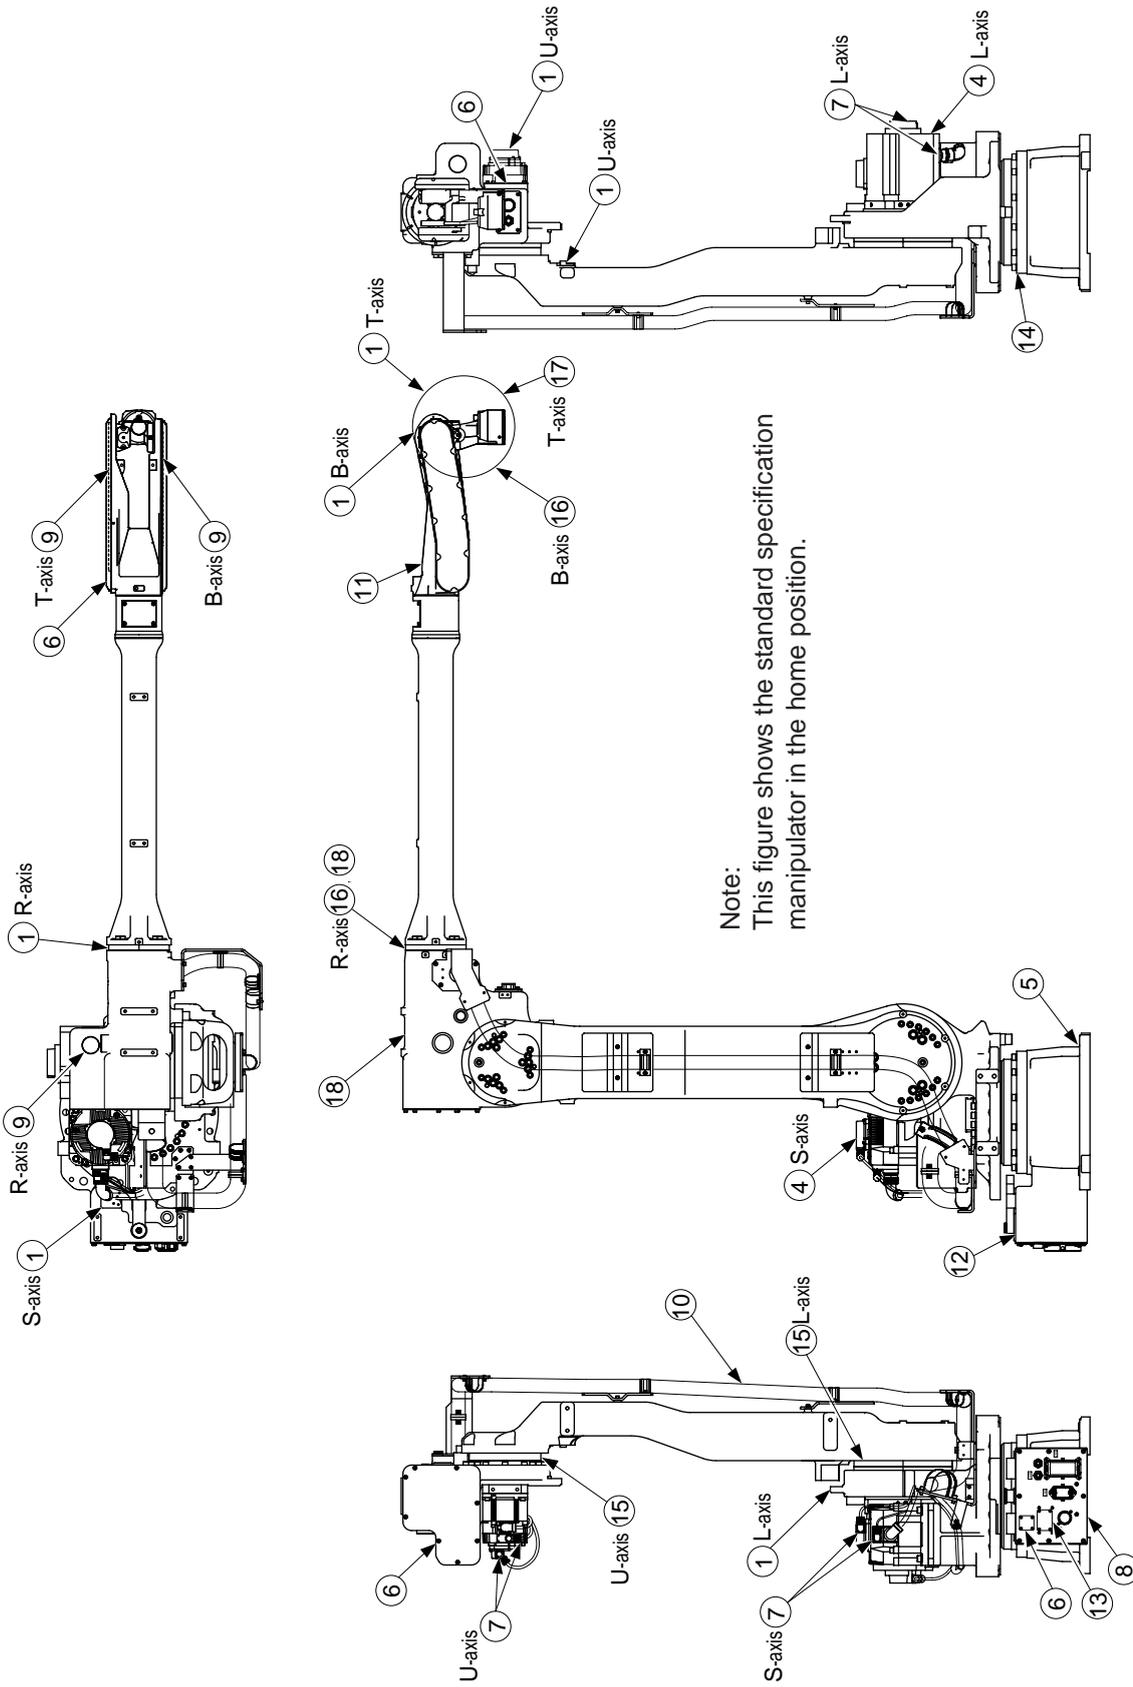


Table 9-2: Inspection Parts and Grease Used

No.	Grease Used	Inspected Parts
14,15	Molywhite RE.No. 00	Speed reducers for S-,L-,U-axes
16	Harmonic Grease 4B No.2	Speed reducers for R-axis
17	Harmonic Grease SK-1A	Speed reducers for B-axis
18	Alvania EP Grease 2	R-axis Tapered roller bearing T-axis gear

Numbers in the above table correspond to the numbers in the *table 9-1 "Inspection Items"*.

9.2 Notes on Maintenance Procedures

9.2.1 Battery Pack Replacement

The battery packs (type: HW0470360-A) are installed in the positions shown in *fig. 9-2 "Battery Location"*. If the battery alarm occurs in the DX100, replace the battery in accordance with the following procedures:

Fig. 9-2: Battery Location



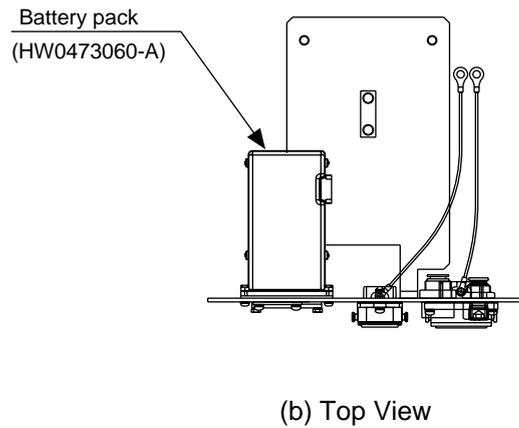


Fig. 9-3: Battery Connection

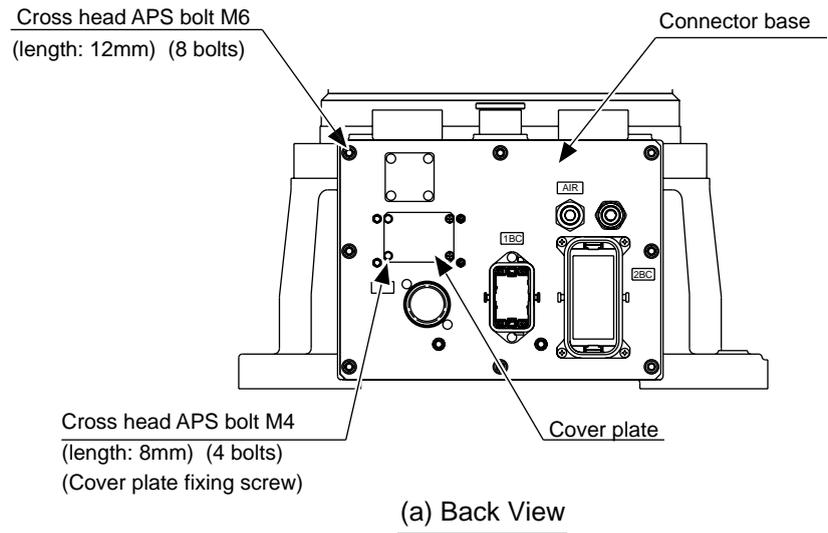

1. Turn OFF the DX100 main power supply.
2. Remove the plate fixing screws and the plate on the connector base, then pull the battery pack out to replace it with the new one.
3. Remove the old battery pack from the battery holder.
4. Connect the new battery pack to the unoccupied connector on the board.
5. Remove the old battery pack from the board.

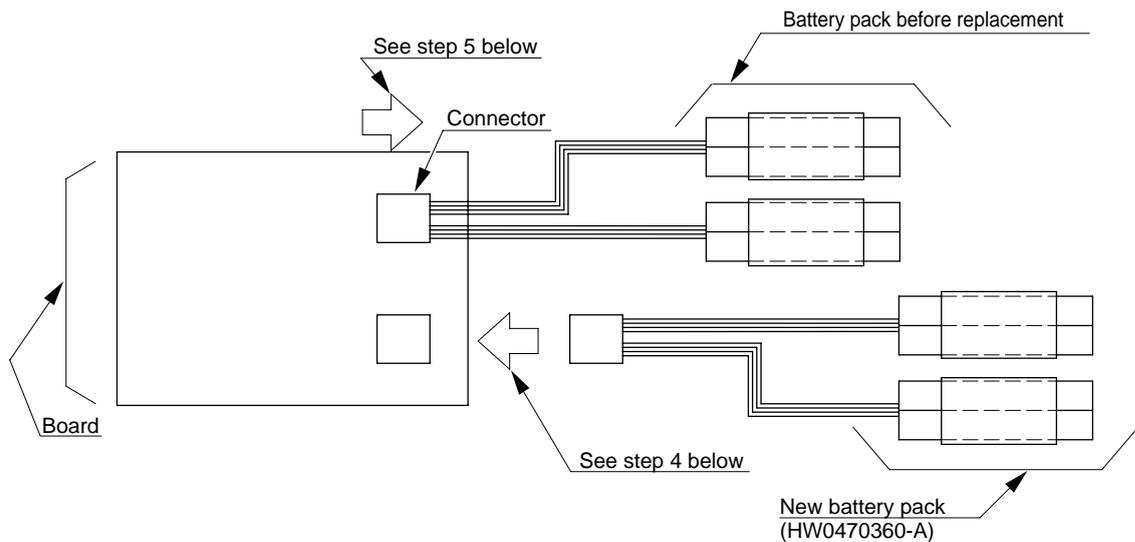

Remove the old battery pack after connecting the new one so that the encoder absolute data does not disappear.

6. Mount the new battery pack to the holder.
7. Reinstall the plate.



Do not allow plate to pinch the cables when reinstalling the plate.

9.3 Notes on Grease Replenishment/Exchange Procedures

Make sure to follow the instructions listed below at grease replenishment/exchange. Failure to observe the following notes may result in damage to motor and speed reducer.




- If grease is added without removing the plug/screw from the grease exhaust port, grease will leak inside a motor or an oil seal of a speed reducer will come off, which may result in damage to the motor. Make sure to remove the plug/screw.
- Do not install a joint, a hose, etc. to the grease exhaust port. Failure to observe this instruction may result in damage to the motor due to coming off of an oil seal.
- Make sure to use a grease pump to inject grease. Set air supply pressure to the grease pump at 0.3 MPa or less, and the grease injection rate at 8 g/s or less.
- Make sure to fill hoses, which are joined to the grease inlet, with grease beforehand to prevent air from intruding into the speed reducer.

9.3.1 Grease Replenishment/Exchange for S-Axis Speed Reducer



For the ceiling-mounted manipulator, the grease exhaust port and the grease inlet are inverted.

Fig. 9-4: S-Axis Speed Reducer Diagram

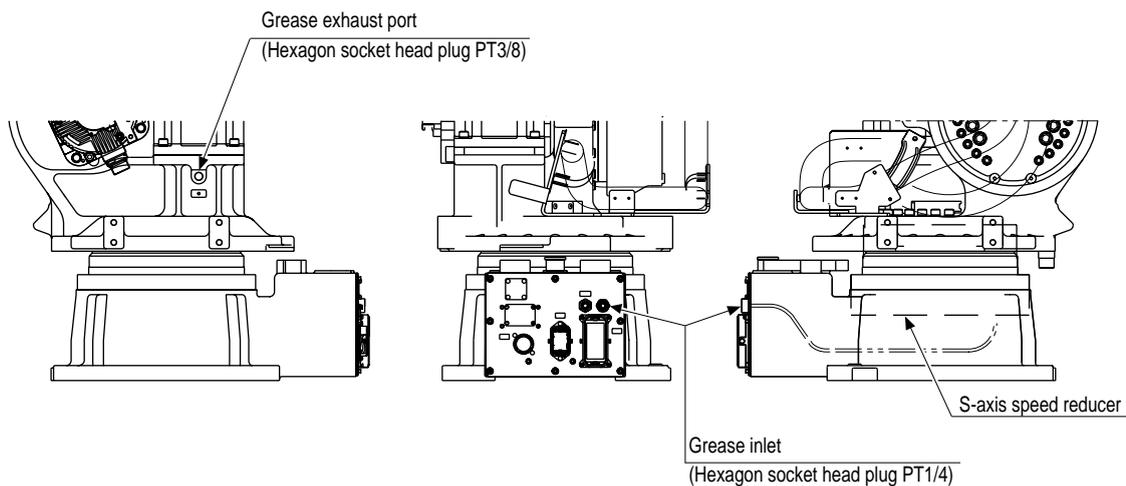

9.3.1.1 Grease Replenishment (Refer to *fig. 9-4 "S-Axis Speed Reducer Diagram"* at page 9-8.)

1. Remove the hexagon socket head plug PT3/8 from the grease exhaust port.



- If grease is injected with the plug on, grease will leak inside the motor and may cause a damage. Make sure to remove the plug before the grease injection.
- Do not install a joint, a hose, etc. to the grease exhaust port. Failure to observe this instruction may result in damage to the motor due to coming off of an oil seal.

2. Remove the hexagon socket head plug PT1/4 from the grease inlet and install the grease zerk PT1/4. (The grease zerk is delivered with the manipulator.)
3. Inject grease through the grease inlet using a grease gun.
 - Grease type: Molywhite RE No. 00
 - Amount of grease: 520 cc (1040 cc for 1st supply)
 - Air supply pressure of grease pump: 0.3 MPa or less
 - Grease injection rate: 8 g/s or less
4. Move the S-axis for a few minutes to discharge excess grease.
5. Remove the grease zerk from the grease inlet and reinstall the plug PT1/4. Apply Three Bond 1206C (Refer to *table 10-1 "Spare Parts for the MOTOMAN-MA03100-A00, -A01"* at page 10-1) to the thread part of the plug, and tighten the plug with a tightening torque of 12 N·m (1.2 kgf·m).
6. Wipe the discharged grease with a cloth and reinstall the plug PT3/8 on the grease exhaust port. Apply Three Bond 1206C to the thread part of the plug, and tighten the plug with a tightening torque of 23 N·m (2.34 kgf·m).

9.3.1.2 Grease Exchange (Refer to *fig. 9-4 "S-Axis Speed Reducer Diagram"* at page 9-8.)

1. Remove the hexagon socket head plug PT3/8 from the grease exhaust port.



- If grease is injected with the plug on, grease will leak inside the motor and may cause a damage. Make sure to remove the plug before the grease injection.
- Do not install a joint, a hose, etc. to the grease exhaust port. Failure to observe this instruction may result in damage to the motor due to coming off of an oil seal.

2. Remove the hexagon socket head plug PT1/4 from the grease inlet and install the grease zerk PT1/4. (The grease zerk is delivered with the manipulator.)
3. Inject grease through the grease inlet using a grease gun.
 - Grease type: Molywhite RE No. 00
 - Amount of grease: 2600 cc
 - Air supply pressure of grease pump: 0.3 MPa or less
 - Grease injection rate: 8 g/s or less

MA3100

9 Maintenance and Inspection
9.3 Notes on Grease Replenishment/Exchange Procedures

4. The grease exchange is completed when new grease appears in the grease exhaust port.
The new grease can be distinguished from the old grease by color.
5. Move the S-axis for a few minutes to discharge excess grease.
6. Wipe the discharged grease with a cloth and reinstall the plug PT3/8 on the grease exhaust port. Apply Three Bond 1206C to the thread part of the plug, and tighten the plug with a tightening torque of 23 N·m (2.34 kgf·m).


**NOTE**

If the plug is installed while grease is being exhausted, grease will leak inside the motor and may cause a damage. Ensure that grease has been completely exhausted before installing the plug.

7. Remove the grease zerk from the grease inlet and reinstall the plug PT1/4. Apply Three Bond 1206C to the thread part of the plug, and tighten the plug with a tightening torque of 12 N·m (1.2 kgf·m).

9.3.2 Grease Replenishment/Exchange for L-Axis Speed Reducer

Fig. 9-5: L-Axis Speed Reducer

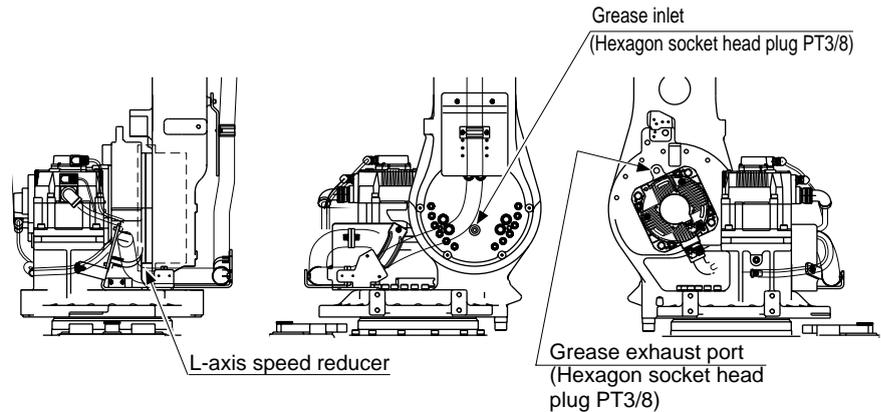

9.3.2.1 Grease Replenishment (Refer to fig. 9-5 "L-Axis Speed Reducer".)

1. Tilt the L-arm vertical to the ground.
2. Remove the hexagon socket head plug PT3/8 from the grease exhaust port.

NOTE

- If grease is injected with the plug on, grease will leak inside the motor and may cause a damage. Make sure to remove the plug before the grease injection.
- Do not install a joint, a hose, etc. to the grease exhaust port. Failure to observe this instruction may result in damage to the motor due to coming off of an oil seal.

3. Remove the hexagon socket head plug PT3/8 from the grease inlet and install the grease zerk PT3/8. (The grease zerk is delivered with the manipulator.)
4. Inject grease through the grease inlet using a grease gun.
 - Grease type: Molywhite RE No. 00
 - Amount of grease: 250 cc (500 cc for 1st supply)
 - Air supply pressure of grease pump: 0.3 MPa or less
 - Grease injection rate: 8 g/s or less
5. Move the L-axis for a few minutes to discharge excess grease.
6. Wipe the discharged grease with a cloth and reinstall the plug PT3/8 on the grease exhaust port. Apply Three Bond 1206C to the thread part of the plug, and tighten the plug with a tightening torque of 23 N·m (2.34 kgf·m).
7. Remove the grease zerk from the grease inlet and reinstall the plug PT3/8. Apply Three Bond 1206C to the thread part of the plug, and tighten the plug with a tightening torque of 23 N·m (2.34 kgf·m).

MA3100

- 9 Maintenance and Inspection
 9.3 Notes on Grease Replenishment/Exchange Procedures

9.3.2.2 Grease Exchange (Refer to *fig. 9-5 "L-Axis Speed Reducer" at page 9-11.*)

1. Tilt the L-arm vertical to the ground.
2. Remove the hexagon socket head plug PT3/8 from the grease exhaust port..



- If grease is injected with the plug on, grease will leak inside the motor and may cause a damage. Make sure to remove the plug before the grease injection.
- Do not install a joint, a hose, etc. to the grease exhaust port. Failure to observe this instruction may result in damage to the motor due to coming off of an oil seal.

3. Remove the hexagon socket head plug PT3/8 from the grease inlet and install the grease zerk PT3/8. (The grease zerk is delivered with the manipulator.)
4. Inject grease through the grease inlets using a grease gun.
 - Grease type: Molywhite RE No. 00
 - Amount of grease: 1650 cc
 - Air supply pressure of grease pump: 0.3 MPa or less
 - Grease injection rate: 8 g/s or less
5. The grease exchange is completed when new grease appears in the exhaust port. The new grease can be distinguished from the old grease by color.
6. Move the L-axis for a few minutes to discharge excess grease.
7. Wipe the discharged grease with a cloth and reinstall the plug PT3/8 on the grease exhaust port. Apply Three Bond 1206C to the thread part of the plug, and tighten the plug with a tightening torque of 23 N·m (2.34 kgf·m).



- If the plug is installed while grease is being exhausted, grease will leak inside the motor and may cause a damage. Ensure that grease has been completely exhausted before installing the plug.

8. Remove the grease zerk from the grease inlet and reinstall the plug PT3/8. Apply Three Bond 1206C to the thread part of the plug, and tighten the plug with a tightening torque of 23 N·m (2.34 kgf·m).

9.3.3 Grease Replenishment/Exchange for U-Axis Speed Reducer

Fig. 9-6: U-Arm Posture in Grease Replenishment/Exchange for U-Axis Speed Reducer


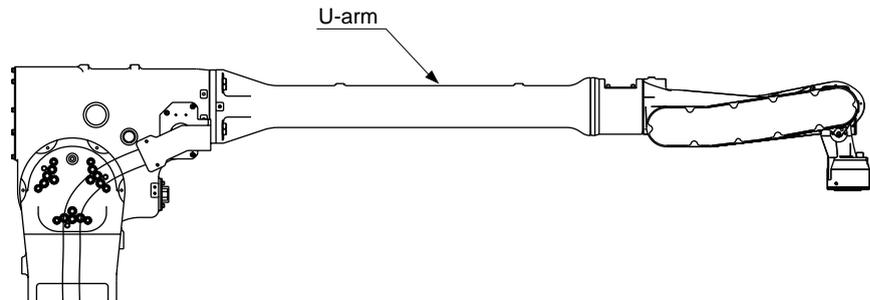


Fig. 9-7: U-Axis Speed Reducer



9.3.3.1 Grease Replenishment (Refer to fig. 9-7 "U-Axis Speed Reducer".)

1. Tilt the U-arm horizontal to the ground. (Refer to fig. 9-6 "U-Arm Posture in Grease Replenishment/Exchange for U-Axis Speed Reducer".)
2. Remove the hexagon socket head plug PT3/8 from the grease exhaust port.

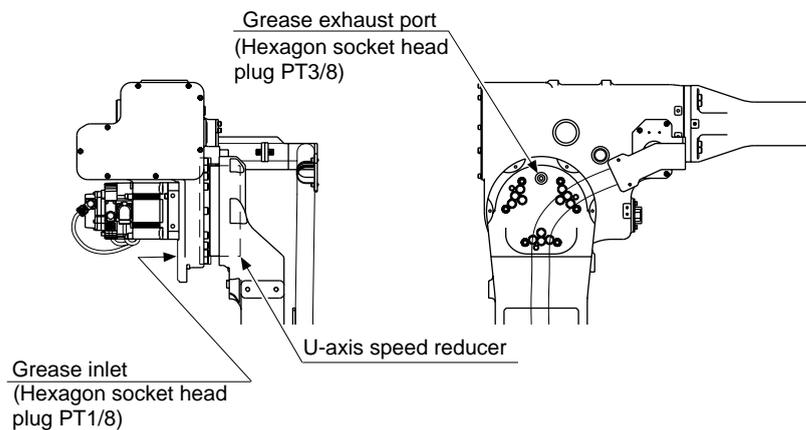

- If grease is injected with the plug on, grease will leak inside the motor and may cause a damage. Make sure to remove the plug before the grease injection.
- Do not install a joint, a hose, etc. to the grease exhaust port. Failure to observe this instruction may result in damage to the motor due to coming off of an oil seal.

3. Remove the hexagon socket head plug PT1/8 from the grease inlet and install the grease zerk PT1/8. (The grease zerk is delivered with the manipulator.)
4. Inject grease through the grease inlet using a grease gun.
 - Grease type: Molywhite RE No. 00
 - Amount of grease: 140 cc
(280 cc for 1st supply)
 - Air supply pressure of grease pump: 0.3 MPa or less

MA3100

9 Maintenance and Inspection
 9.3 Notes on Grease Replenishment/Exchange Procedures

- Grease injection rate: 8 g/s or less
- 5. Move the U-axis for a few minutes to discharge excess grease.
- 6. Wipe the discharged grease with a cloth and reinstall the plug PT3/8 on the grease exhaust port. Apply Three Bond 1206C to the thread part of the plug, and tighten the plug with a tightening torque of 23 N·m (2.34 kgf·m).
- 7. Remove the grease zerk from the grease inlet and reinstall the plug PT1/8. Apply Three Bond 1206C to the thread part of the plug, and tighten the plug with a tightening torque of 4.9 N·m (0.5 kgf·m).

9.3.3.2 Grease Exchange (Refer to *fig. 9-7 “U-Axis Speed Reducer”* at page 9-13.)

1. Tilt the U-arm horizontal to the ground. (Refer to *fig. 9-6 “U-Arm Posture in Grease Replenishment/Exchange for U-Axis Speed Reducer”* at page 9-13.)
2. Remove the hexagon socket head plug PT3/8 from the grease exhaust port.

NOTE

- If grease is injected with the plug on, grease will leak inside the motor and may cause a damage. Make sure to remove the plug before the grease injection.
- Do not install a joint, a hose, etc. to the grease exhaust port. Failure to observe this instruction may result in damage to the motor due to coming off of an oil seal.

3. Remove the hexagon socket head plug PT1/8 from the grease inlet and install the grease zerk PT1/8. (The grease zerk is delivered with the manipulator.)
4. Inject grease through the grease inlet using a grease gun.
 - Grease type: Molywhite RE No. 00
 - Amount of grease: 700 cc
 - Air supply pressure of grease pump: 0.3 MPa or less
 - Grease injection rate: 8 g/s or less
5. The grease exchange is completed when new grease appears in the grease exhaust port. The new grease can be distinguished from the old grease by color.
6. Move the U-axis for a few minutes to discharge excess grease.
7. Wipe the discharged grease with a cloth and reinstall the plug PT3/8 on the grease exhaust port. Apply Three Bond 1206C to the thread part of the plug, and tighten the plug with a tightening torque of 23 N·m (2.34 kgf·m).


NOTE

If the plug is installed while grease is being exhausted, grease will leak inside the motor and may cause a damage. Ensure that grease has been completely exhausted before installing the plug.

8. Remove the grease zerk from the grease inlet and reinstall the plug PT1/8. Apply Three Bond 1206C to the thread part of the plug, and tighten the plug with a tightening torque of 4.9 N·m (0.5 kgf·m).

9.3.4 Grease Replenishment/Exchange for R-Axis Speed Reducer

Fig. 9-8: R-Axis Speed Reducer

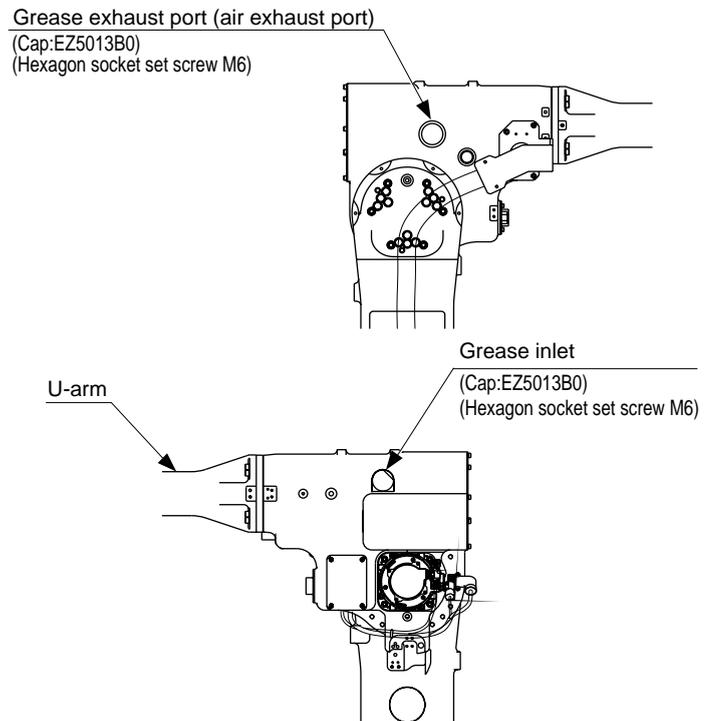

9.3.4.1 Grease Replenishment (Refer to fig. 9-8 "R-Axis Speed Reducer".)

1. Remove the hexagon socket set screw M6 and its cap from the grease exhaust port.



- If grease is injected with the screw on, grease will leak inside the motor and may cause a damage. Make sure to remove the screw before the grease injection.
- Do not install a joint, a hose, etc. to the grease exhaust port. Failure to observe this instruction may result in damage to the motor due to coming off of an oil seal.

2. Remove the hexagon socket set screw M6 and its cap from the grease inlet and install the grease zerk A-MT6X1. (The grease zerk is delivered with the manipulator.)
3. Inject grease through the grease inlet using a grease gun.

– Grease type:	Harmonic Grease SK-1A
– Amount of grease:	8 cc (16 cc for 1st supply)
– Air supply pressure of grease pump:	0.3 MPa or less
– Grease injection rate:	8 g/s or less



The exhaust port is used for air exhaust, and grease is not exhausted from the exhaust port. Do not inject excessive grease through the grease inlet.


MA3100

9 Maintenance and Inspection**9.3 Notes on Grease Replenishment/Exchange Procedures**

4. Move the R-axis for a few minutes to discharge excess grease.
5. Wipe the discharged grease with a cloth and reinstall the screw M6 and its cap on the grease exhaust port. Apply Three Bond 1206C to the thread part of the screw, and tighten the screw with a tightening torque of 2.9 N·m (0.29 kgf·m).
6. Remove the grease zerk from the grease inlet and reinstall the screw M6 and its cap. Apply Three Bond 1206C to the thread part of the screw, and tighten the screw with a tightening torque of 2.9 N·m (0.29 kgf·m).

9.3.5 Grease Replenishment for B-Axis Speed Reducer

Fig. 9-9: B-Axis Speed Reducers Diagram

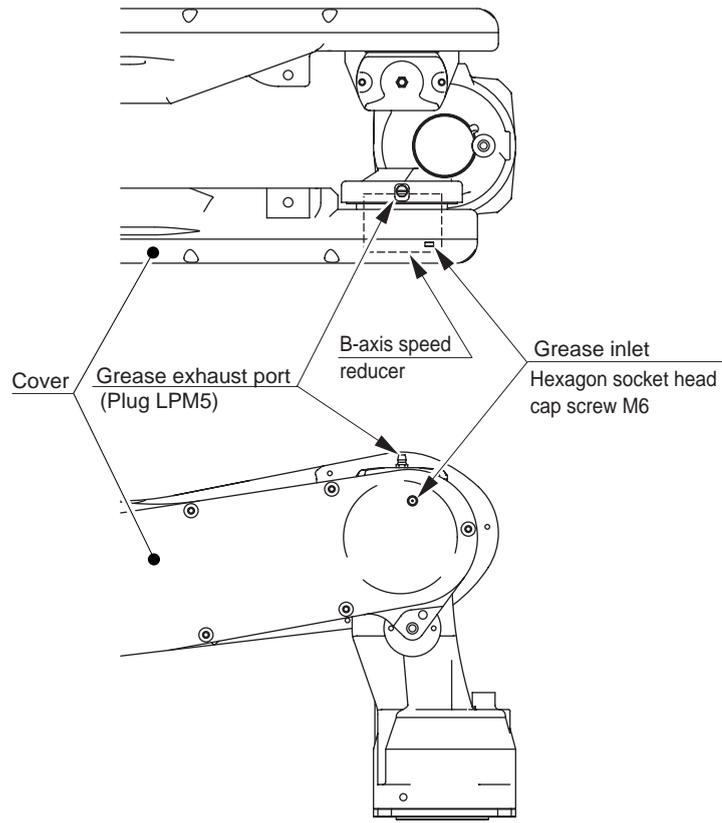

1. Remove the plug LPM5 from the exhaust port.
2. Remove the screw from the grease inlet.
3. Install a grease zerk A-MT6X1 to the grease inlet. (The grease zerk is delivered with the manipulator.)
4. Remove the cover, then inject grease through the grease inlet using a grease gun. (Refer to fig. 9-9 "B-Axis Speed Reducers Diagram".)
 - Grease type: Harmonic grease SK-1A
 - Amount of grease: 7 cc (14 cc for the 1st supply)




The exhaust port is used for air exhaust, and the grease is not exhausted from the exhaust port. Do not inject excessive grease through the grease inlet.

5. Remove the grease zerk from the grease inlet, and reinstall the screw. Before installing the screw, apply Three Bond 1206C on the thread part of the screw, then tighten the screw with a tightening torque of 6 N•m (0.6 kgf•m).
6. Reinstall the plug to the exhaust port, then reinstall the cover.

9.3.6 Grease Replenishment for T-Axis Gear

Fig. 9-10: T-Axis Gear Diagram

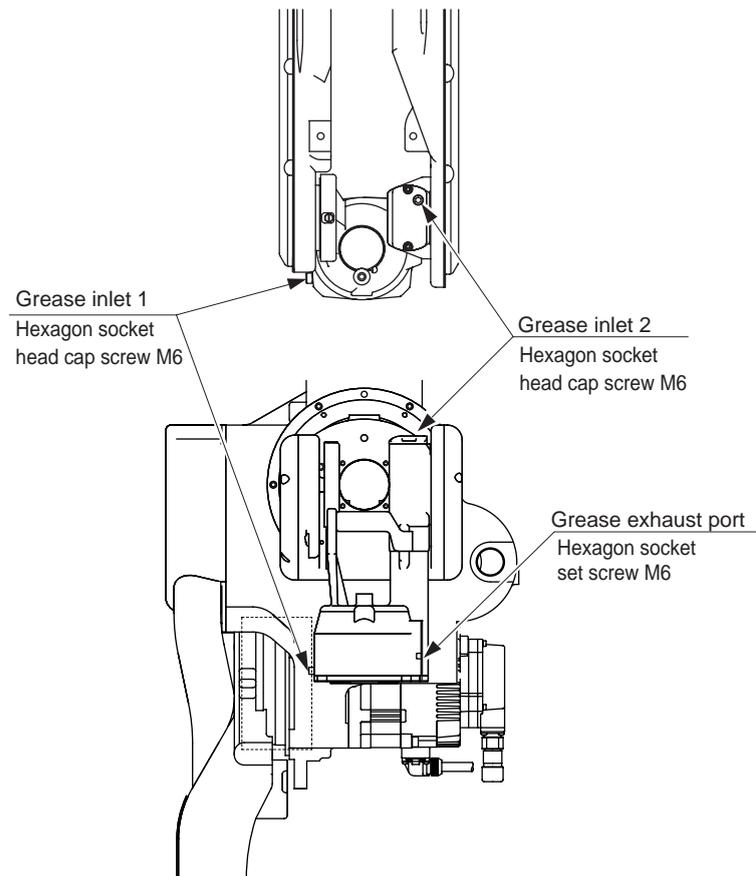

1. Remove the hexagon socket set screw from the exhaust port.
2. Remove the hexagon socket head cap screw M6 from the grease inlet 1.
3. Install a grease zerk A-MT6X1 to the grease inlet 1. (The grease zerk is delivered with the manipulator.)
4. Inject grease through the grease inlet 1 using a grease gun.
 - Grease type: Alvania EP Grease 2
 - Amount of grease: 5 cc



The exhaust port is used for air exhaust, and the grease is not exhausted from the exhaust port. Do not inject excessive grease through the grease inlet.

5. Remove the grease zerk from the grease inlet 1, and reinstall the screw. Before installing the screw, apply Three Bond 1206C on the thread part of the screw, then tighten the screw with a tightening torque of 6 N•m (0.6 kgf•m).
6. Remove the hexagon socket head cap screw M6 from the grease inlet 2.
7. Install a grease zerk A-MT6X1 to the grease inlet 2. (The grease zerk is delivered with the manipulator.)

9 Maintenance and Inspection
9.3 Notes on Grease Replenishment/Exchange Procedures

8. Inject grease through the grease inlet 2 using a grease gun.
- Grease type: Alvania EP Grease 2
 - Amount of grease: 5 cc




The exhaust port is used for air exhaust, and the grease is not exhausted from the exhaust port. Do not inject excessive grease through the grease inlet.

9. Remove the grease zerk from the grease inlet 2, and reinstall the screw. Before installing the screw, apply Three Bond 1206C on the thread part of the screw, then tighten the screw with a tightening torque of 6 N•m (0.6 kgf•m).
10. Reinstall the set screw to the exhaust port. Before installing the set screw, apply Three Bond 1206C on the thread part of the screw, then tighten the screw with a tightening torque of 2.9 N•m (0.29 kgf•m).

9.3.7 Grease Replenishment for R-axis Cross Roller Bearing

9.3.7.1 Grease Replenishment

Fig. 9-11: R-axis Tapered Roller Bearing Diagram

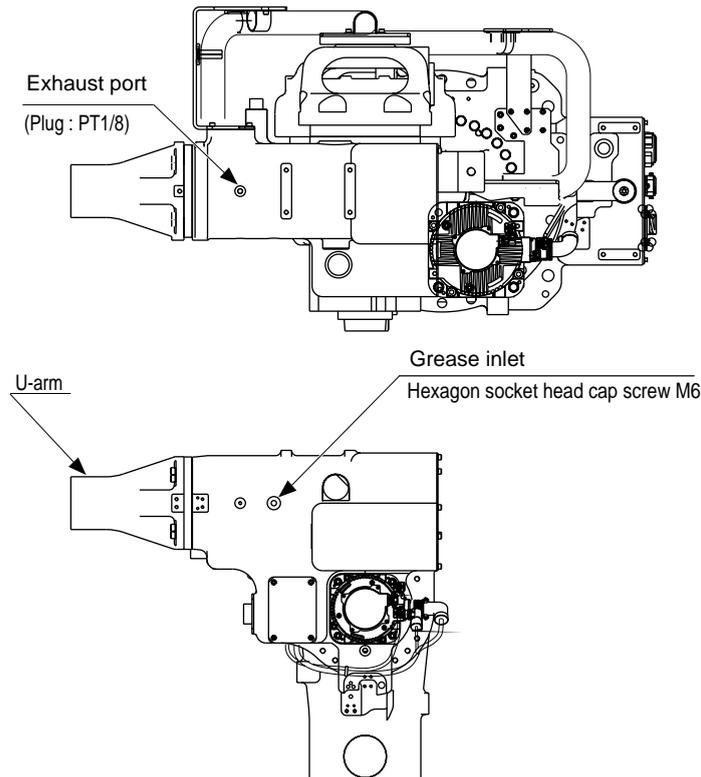

1. Remove the plug PT 1/8 from the exhaust port.
2. Remove the hexagon socket head cap screw M6 from the grease inlet.
3. Install a grease zerk A-MT6 x 1 to the grease inlet. (The grease zerk is delivered with the manipulator.) (Refer to fig. 9-11 "R-axis Tapered Roller Bearing Diagram" .)
4. Inject grease through the grease inlet using a grease gun. (Refer to fig. 9-11 "R-axis Tapered Roller Bearing Diagram" .)
 - Grease type: Alvania EP grease 2
 - Amount of grease: 8 cc (16 cc for the first supply)



The exhaust port is used for air exhaust, and grease is not exhausted from the exhaust port. Do not inject excessive grease through the grease inlet.

5. Reinstall the plug to the exhaust port. Before installing the plug, apply Three Bond 1206C on the thread part of the plug, then tighten the screw with a tightening torque of 4.9 N•m (0.5 kgf•m).
6. Remove the grease zerk from the grease inlet, and reinstall the screw. Before installing the screw, apply Three Bond 1206C on the thread part of the screw, then tighten the screw with a tightening torque of 5 N•m (0.51 kgf•m).

9.3.8 Notes for Maintenance

When performing maintenance such as replacement of a wire harness in the manipulator, the encoder connector may be necessary to be removed. In this case, be sure to connect the battery pack to the battery backup connector before removing the encoder connector.

Removing the encoder connector without connecting the battery pack leads to disappearance of the encoder absolute data.

For the battery pack connection, refer to " Fig. 9-12 Encoder Connector Diagram ".


9.3.8.1 Battery Pack Connection

The connectors (crimped contact-pin) for battery backup are installed at the end point of each motor (marked as BAT and OBT). Connect the battery pack according to the following procedure.

1. Remove a cap attached to battery backup connectors of the motor.
2. Connect a battery pack (HW9470932-A) to the battery backup connectors (BAT and OBT are marked) located at the end point of an encoder cable. With the battery pack connected to the battery backup connectors, perform maintenance check.
3. After the maintenance check, confirm all connectors are connected and remove the battery pack. Reinstall the cap onto the battery backup connectors of the motor.

NOTE Do not remove battery pack in the connector base.


Fig. 9-12: Encoder Connector Diagram

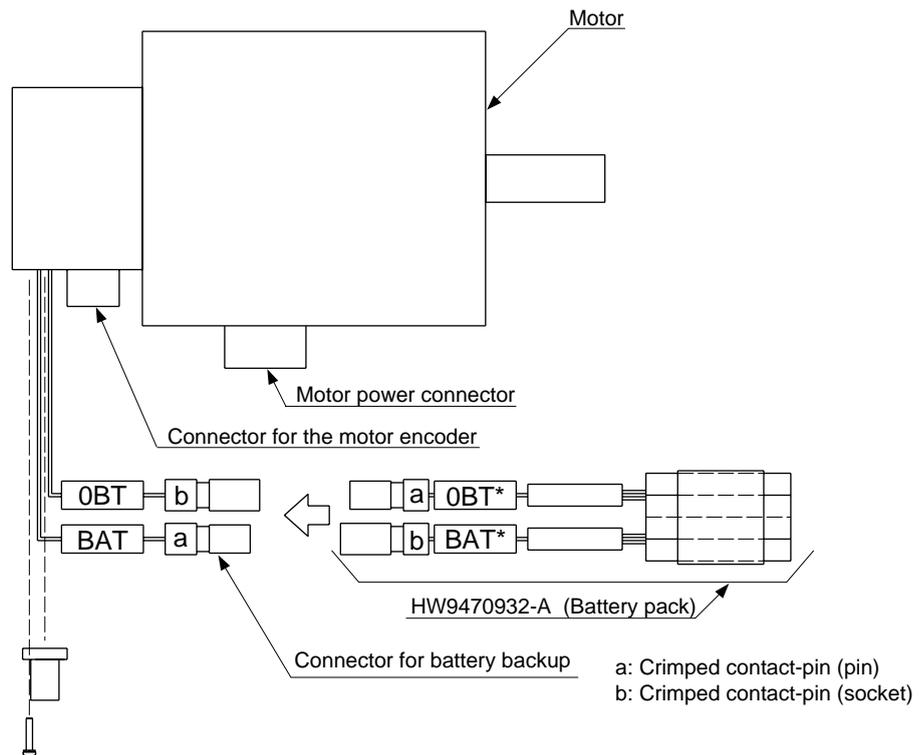

9.3.8.2 Wrist Unit

The motor and encoder units are provided with the wrist unit. To prevent fumes from penetrating into the wrist unit, the matched parts are sealed with sealing bond. If the wrist cover is disassembled, make sure to reseal with sealing bond.

Fig. 9-13: Sealing Part of Wrist Unit

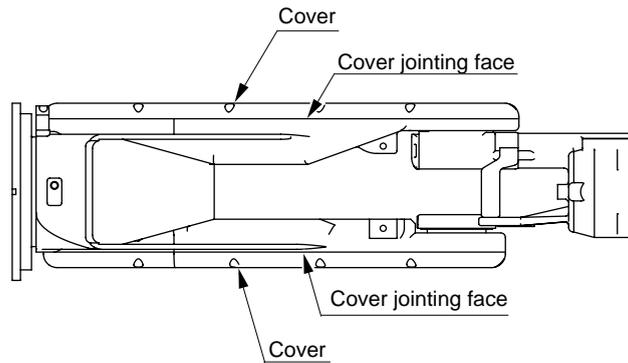

10 Recommended Spare Parts

It is recommended to keep the parts and components in the following table in stock as spare parts for the MOTOMAN-MA3100. Product performance can not be guaranteed when using spare parts from any company other than Yaskawa. The spare parts are ranked as follows:

- Rank A: Expendable and frequently replaced parts
- Rank B: Parts for which replacement may be necessary as a result of frequent operation
- Rank C: Drive Unit



For replacing parts in Rank B or Rank C, contact your Yaskawa representative.

Table 10-1: Spare Parts for the MOTOMAN-MA03100-A00, -A01 (Sheet 1 of 2)

Rank	Parts No.	Name	Type	Manufacturer	Qty	Qty per Unit	Remarks
A	1	Grease	Molywhite RE No. 00	Yaskawa Electric Corporation	16kg	-	
A	2	Grease	Harmonic Grease 4B No.2	Harmonic Drive System Co., Ltd.	2.5kg	-	
A	3	Grease	Harmonic Grease SK-1A	Harmonic Drive System Co., Ltd.	2.5kg	-	
A	4	Grease	Alvania EP Grease 2	Showa Shell Sekiyu.k.k.	16kg	-	
A	5	Liquid Gasket	Three Bond	Three Bond Co., Ltd.	-	-	
B	6	Battery Pack	HW0470360-A	Yaskawa Electric Corporation	1	1	
B	7	Battery Pack	HW9470932-A	Yaskawa Electric Corporation	1	1	
B	8	R-axis Timing Belt	60S4.5M468	Mitsuboshi Belting Limited	1	1	
B	9	B-axis Timing Belt	60S4.5M711	Mitsuboshi Belting Limited	1	1	
B	10	T-axis Timing Belt	60S4.5M932	Mitsuboshi Belting Limited	1	1	
B	11	S-axis Speed Reducer	HW0387752-A	Yaskawa Electric Corporation	1	1	
B	12	S-axis Input Gear	HW0313741-1	Yaskawa Electric Corporation	1	1	
B	13	L-axis Speed Reducer	HW9381465-B	Yaskawa Electric Corporation	1	1	
B	14	L-axis Input Gear	HW9482771-A	Yaskawa Electric Corporation	1	1	

10 Recommended Spare Parts

MA3100


Table 10-1: Spare Parts for the MOTOMAN-MA03100-A00, -A01 (Sheet 2 of 2)

Rank	Parts No.	Name	Type	Manufacturer	Qty	Qty per Unit	Remarks
C	15	U-axis Speed Reducer	HW0387753-A	Yaskawa Electric Corporation	1	1	
C	16	U-axis Input Gear	HW0313740-1	Yaskawa Electric Corporation	1	1	
C	17	R-axis Speed Reducer	HW9380623-A	Yaskawa Electric Corporation	1	1	
C	18	B-axis Speed Reducer	HW0381646-A	Yaskawa Electric Corporation	1	1	
C	19	T-axis Gear Unit	HW0372792-A	Yaskawa Electric Corporation	-	1	
C	20	T-axis Gear (input side)	HW0310757-1	Yaskawa Electric Corporation	1	1	
C	21	AC Servomotor for S-axis	HW0388669-A SGMRV-30ANA-YR1*	Yaskawa Electric Corporation	1	1	
C	22	AC Servomotor for L-axis	HW0388670-A SGMRV-37ANA-YR1*	Yaskawa Electric Corporation	1	1	
C	23	AC Servomotor for U-axis	HW0388667-A SGMRV-13ANA-YR1*	Yaskawa Electric Corporation	1	1	
C	24	AC Servomotor for R-axis	HW0389298-A SGMPH-02ANA-YR1*	Yaskawa Electric Corporation	1	1	
C	25	AC Servomotor for B- and T-axes	HW0389294-A SGMAV-01ANA-YR1*	Yaskawa Electric Corporation	1	2	
C	26	Wire Harness in Manipulator	HW0175116-A	Yaskawa Electric Corporation	1	1	
C	27	Wire Harness in Manipulator	HW0374619-A	Yaskawa Electric Corporation	1	1	For BT-axes
C	28	Connector Base	HW0374034-B	Yaskawa Electric Corporation	1	1	

11 Parts List

11.1 S-Axis Unit

Fig. 11-1: U-Axis Unit

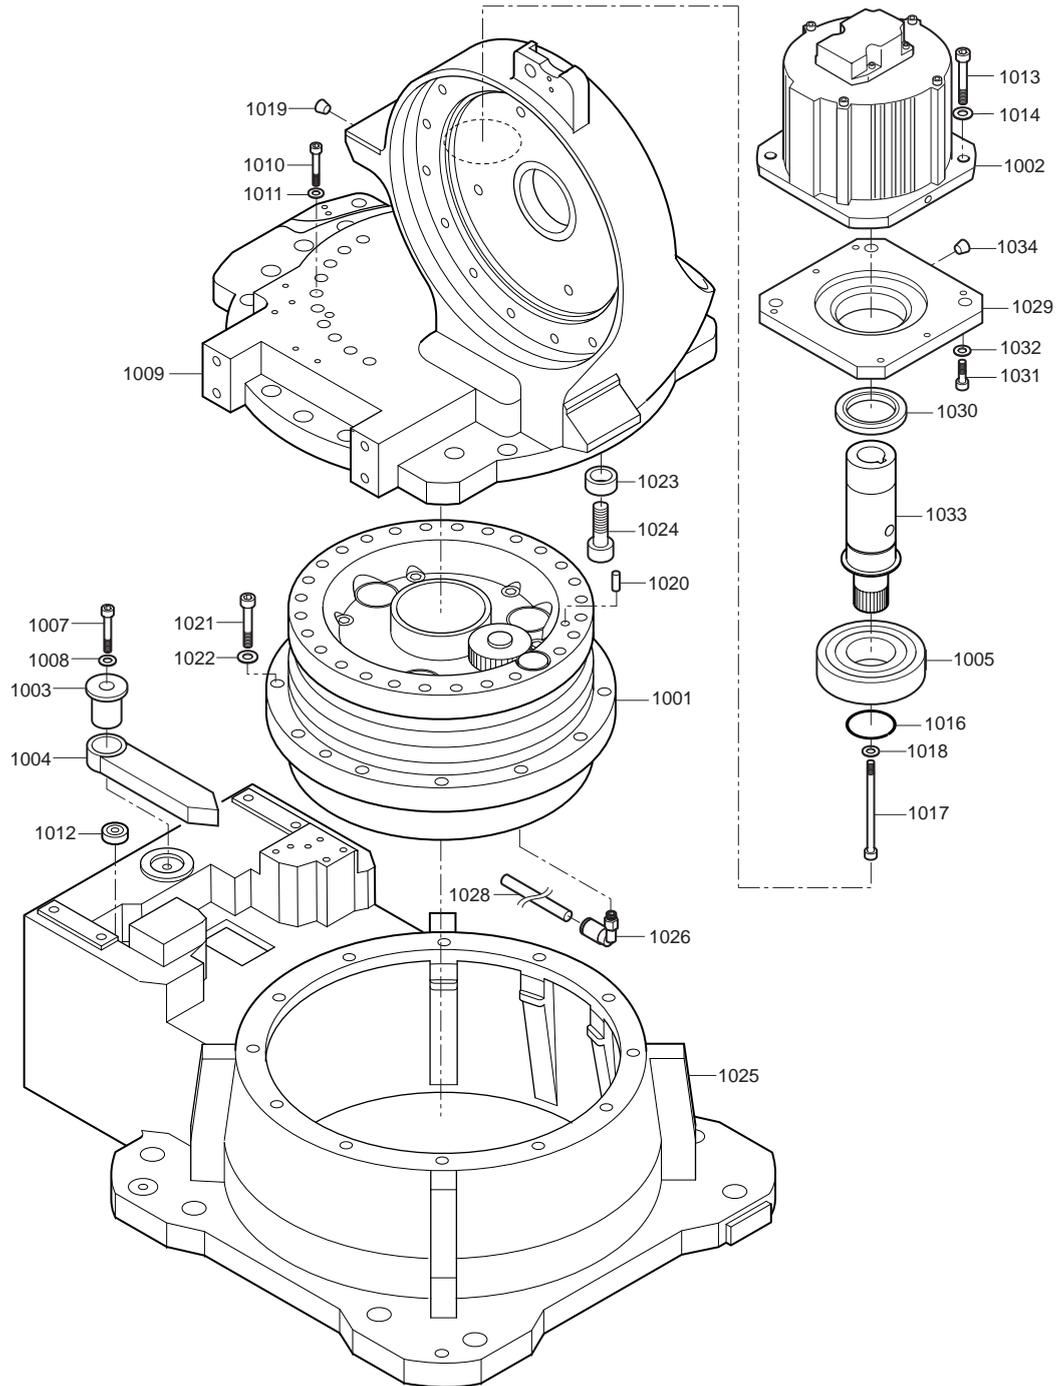

MA3100


11 Parts List
 11.1 S-Axis Unit

Table 11-1: S-Axis Unit

No.	DWG No.	Name	Pcs
1001	HW0387752-A	Speed reducer	1
1002	SGMRV-30ANA-YR1*	Motor	1
1003	HW9404486-1	Shaft	1
1004	HW0400405-1	Stopper	1
1005	6310	Bearing	1
1007	M8X45	Socket screw	1
1008	2H-8	Spring washer	1
1009	HW0102237-2	S head	1
1010	M12X45	Socket screw	15
1011	2H-12	Spring washer	15
1012	C-30-SG-22A	Glomet	1
1013	M12X55	Socket screw	3
1014	2H-12	Spring washer	3
1016	STW-50	Retaining Ring-C type	1
1017	M8X100	Socket screw	1
1018	2H-8	Spring washer	1
1019	PT3/8 (STAINLESS coating)	Plug	1
1020	MSTH10-25	Parallel pin	1
1021	M12X55	Socket screw	12
1022	2H-12	Spring washer	12
1023	HW9405875-1	Coller	1
1024	M20X40	Socket screw	1
1025	HW0102236-1	Base	1
1026	KQ2L10-01S	Elbow	1
1028	NB-1075-0.43	Tube	1
1029	HW0314010-1	M base	1
1030	Y507212.5	Oil seal	1
1031	M6X20	Socket screw	2
1032	2H-6	Spring washer	2
1033	HW0313741-1	Gear	1
1034	PT1/8 (STAINLESS coating)	Plug	1

11.2 L-Axis Unit

Fig. 11-2: L-Axis Unit

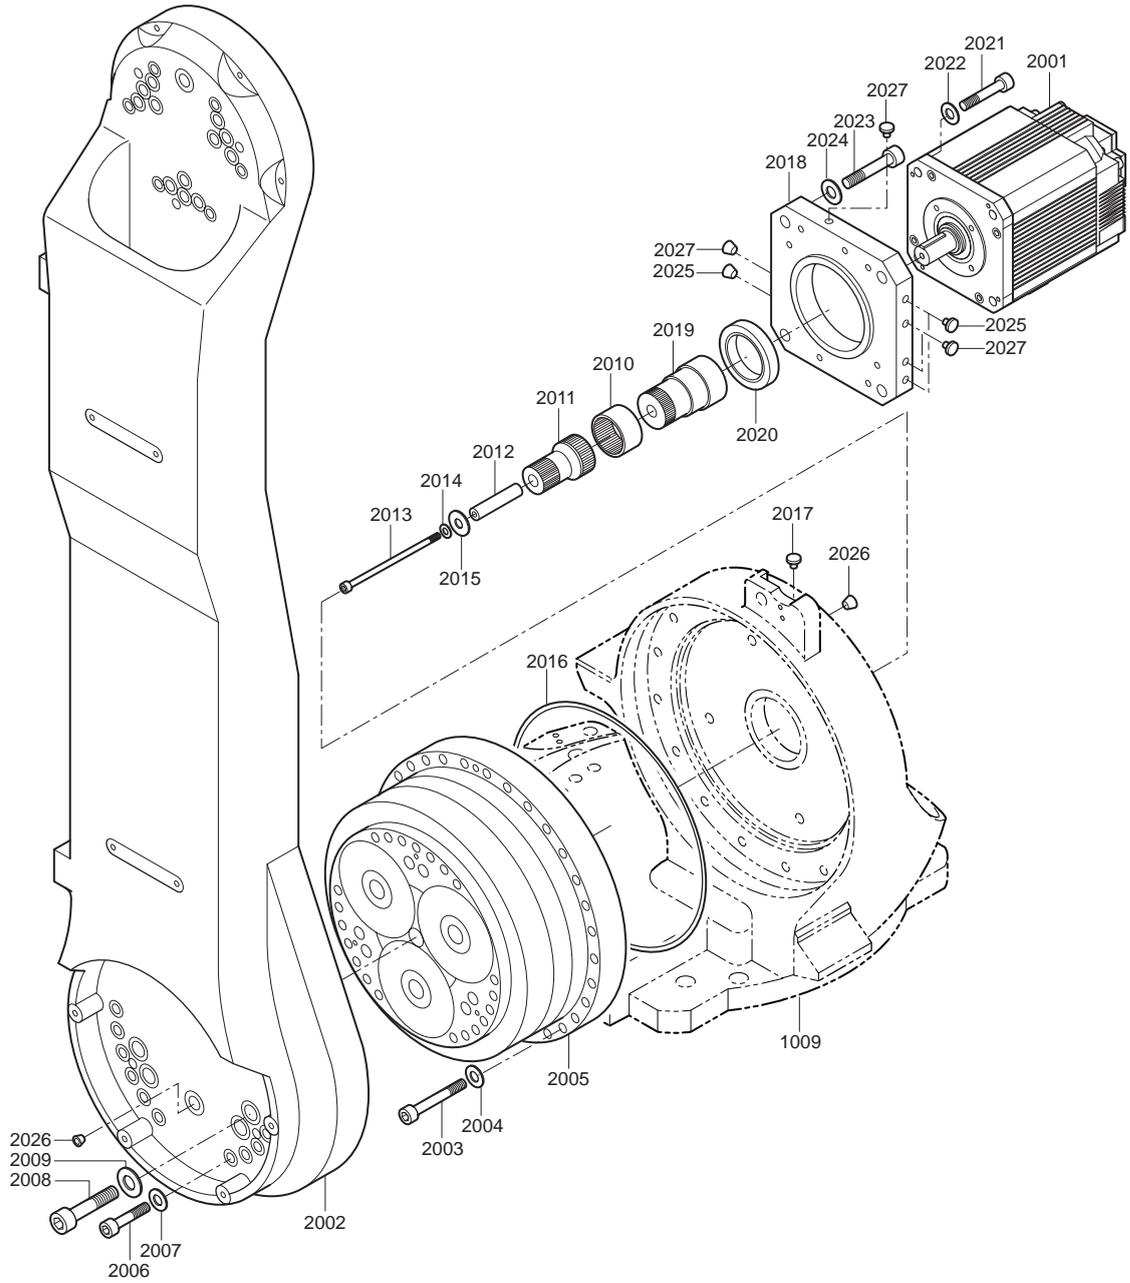

MA3100


11 Parts List
 11.2 L-Axis Unit

Table 11-2: L-Axis Unit

No.	DWG No.	Name	Pcs
2001	SGMRV-37ANA-YR1*	Motor	1
2002	HW0102644-1	L arm	1
2003	M12X55	Socket screw	16
2004	2H-12	Spring washer	16
2005	HW9381465-B	Speed reducer	1
2006	M10X40	Socket screw	18
2007	2H-10	Spring washer	18
2008	M16X45	Socket screw	6
2009	2H-16	Spring washer	6
2010	HW9481343-A	Shaft	1
2011	HW9482771-A	Gear	1
2012	HW9405902-1	Pipe	1
2013	M8X130	Socket screw	1
2014	2H-8	Spring washer	1
2015	M8	Washer	1
2016	G270	O ring	1
2017	EZ0094-A0	Air breather	1
2018	HW0314011-1	M base	1
2019	HW0312815-2	Shaft	1
2020	Y507212.5	Oil seal	1
2021	M12X65	Socket screw	4
2022	2H-12	Spring washer	4
2023	M6X30	Socket screw	2
2024	2H-6	Spring washer	2
2025	EZ5002A0	Cap	3
2026	PT3/8 (STAINLESS coating)	Plug	2
2027	PT1/8 (STAINLESS coating)	Plug	4
1009	HW0102237-2	S head	1

11.3 U-Axis Unit

Fig. 11-3: U-Axis Unit

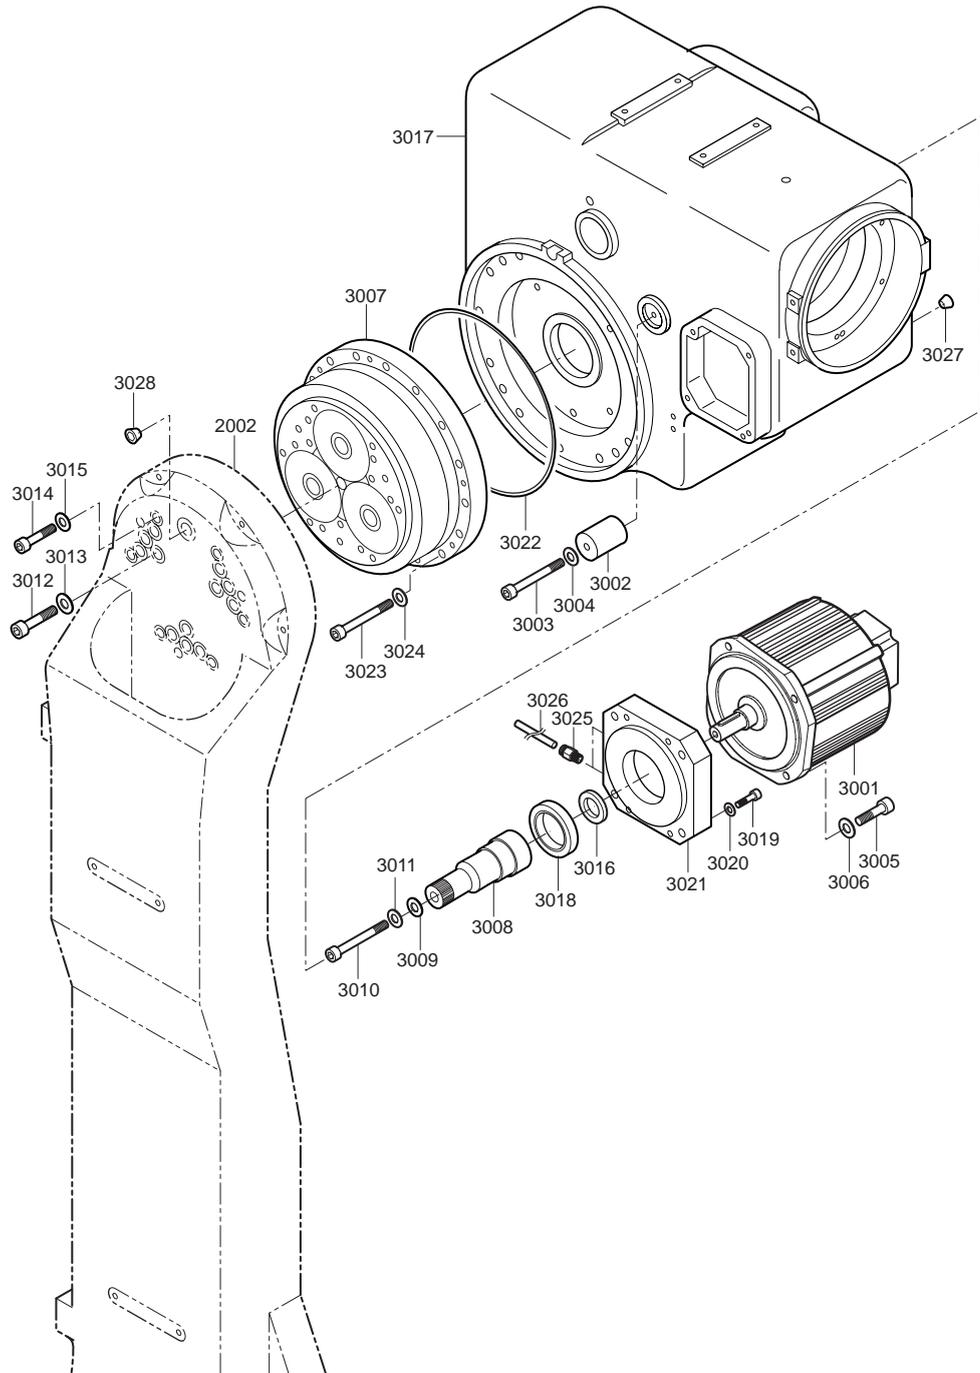

MA3100


11 Parts List
 11.3 U-Axis Unit

Table 11-3: U-Axis Unit

No.	DWG No.	Name	Pcs
3001	SGMRV-13ANA-YR1*	Motor	1
3002	HW0413914-1	Stopper	1
3003	M6X60	Socket screw	1
3004	2H-6	Spring washer	1
3005	M8X55	Socket screw	4
3006	2H-8	Spring washer	4
3007	HW0387753-A	Speed reducer	1
3008	HW0313740-1	Gear	1
3009	HW8411125-3	Washer	1
3010	M6X115	Socket screw	1
3011	2H-6	Spring washer	1
3012	M12X30	Socket screw	12
3013	SW-2H-12	Spring washer	12
3014	M10X30	Socket screw	6
3015	2H-10	Spring washer	6
3016	HW9405257-1	Collar	1
3017	HW0102645-1	Casing	1
3018	Y426012.5	Oil seal	1
3019	M6X30	Socket screw	2
3020	2H-6	Spring washer	2
3021	HW0314012-1	M base	1
3022	G195	O ring	1
3023	M10X40	Socket screw	16
3024	2H-10	Spring washer	16
3025	TSH6-01M	Union	2
3026	UB-0640-0.1C	Tube	2
3027	PT1/8 (STAINLESS coating)	Plug	1
3028	PT3/8 (STAINLESS coating)	Plug	1
2002	HW0102644-1	L arm	1

11.4 R-Axis Unit

Fig. 11-4: R-Axis Unit

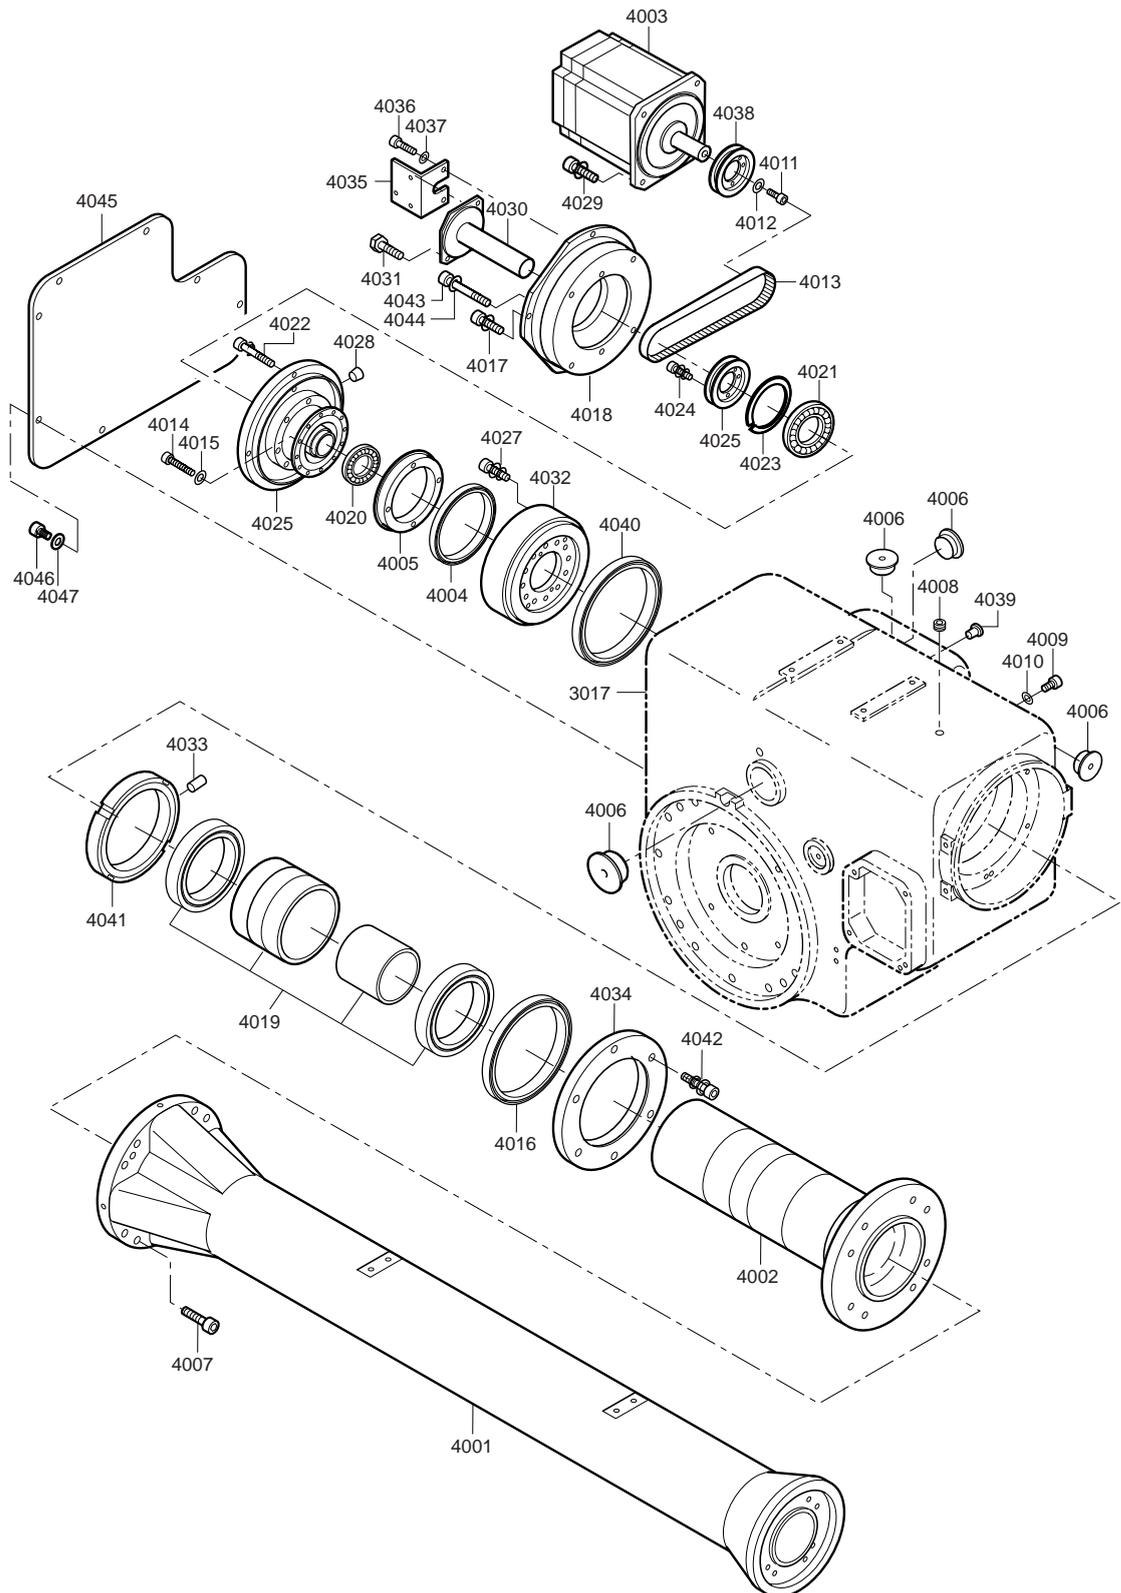

MA3100

11 Parts List
11.4 R-Axis Unit

Table 11-4: R-Axis Unit (Sheet 1 of 2)


No.	DWG No.	Name	Pcs
3017	HW0102645-1	Casing	1
4001	HW0102646-2	U-arm-B	1
4002	HW0201294-1	Shaft	1
4003	SGMPH-02ANA-YR1*	Motor	1
4004	VC901056	Oil seal	1
4005	HW9404736-1	Shaft	1
4006	EZ5013B0	Cap	4
4007	M8X30	GT-SA Bolt	8
4008	PT1/8 (STAINLESS coating)	Plug	1
4009	M6X6	Socket screw	1
4010	2H-6	Spring washer	1
4011	M4X12	Socket screw	1
4012	2H-4	Spring washer	1
4013	60S4.5M468	Belt	1
4014	M4X20	Socket screw	12
4015	2H-4	Spring washer	12
4016	VC1051258	Oil seal	1
4017	M6X20	GT-SA Bolt	5
4018	HW0201296-1	Housing	1
4019	32919XUDB+57/G20	Bearing	1
4020	6806ZZ	Bearing	1
4021	6809ZZ	Bearing	1
4022	M6X45	GT-SA Bolt	4
4023	IRTW-58	Retaining rings	1
4024	M4X10	GT-SA Bolt	4
4025	HW9481267-A	Pulley	1
4026	HW9380623-A	Speed reducer	1
4027	M4X10	GT-SA Bolt	2
4028	M6X8	H-set screw	2
4029	M5X20	GT-SA Bolt	3
4030	HW9301491-A	Support	1
4031	M5X16	APS Bolt	2
4032	HW9303180-1	Shaft	1
4033	M5X8	Magic screw	2
4034	HW9301880-1	B-cover	1
4035	HW9404738-1	Support	1
4036	M5X10	Socket screw	2
4037	2H-5	Spring washer	2
4038	HW9481280-A	Pulley	1
4039	EZ5002A0	Cap	1
4040	V-120A	V-ring	1
4041	HW9404713-1	B-nut	1
4042	M8X30	GT-SA Bolt	6

Table 11-4: R-Axis Unit (Sheet 2 of 2)

No.	DWG No.	Name	Pcs
4043	M6X50	Socket screw	6
4044	2H-6	Spring washer	6
4045	HW0414652-1	Cover	1
4046	M6X16	Socket screw	8
4047	2H-6	Spring washer	8

11.5 Wrist Unit

Fig. 11-5: Wrist Unit

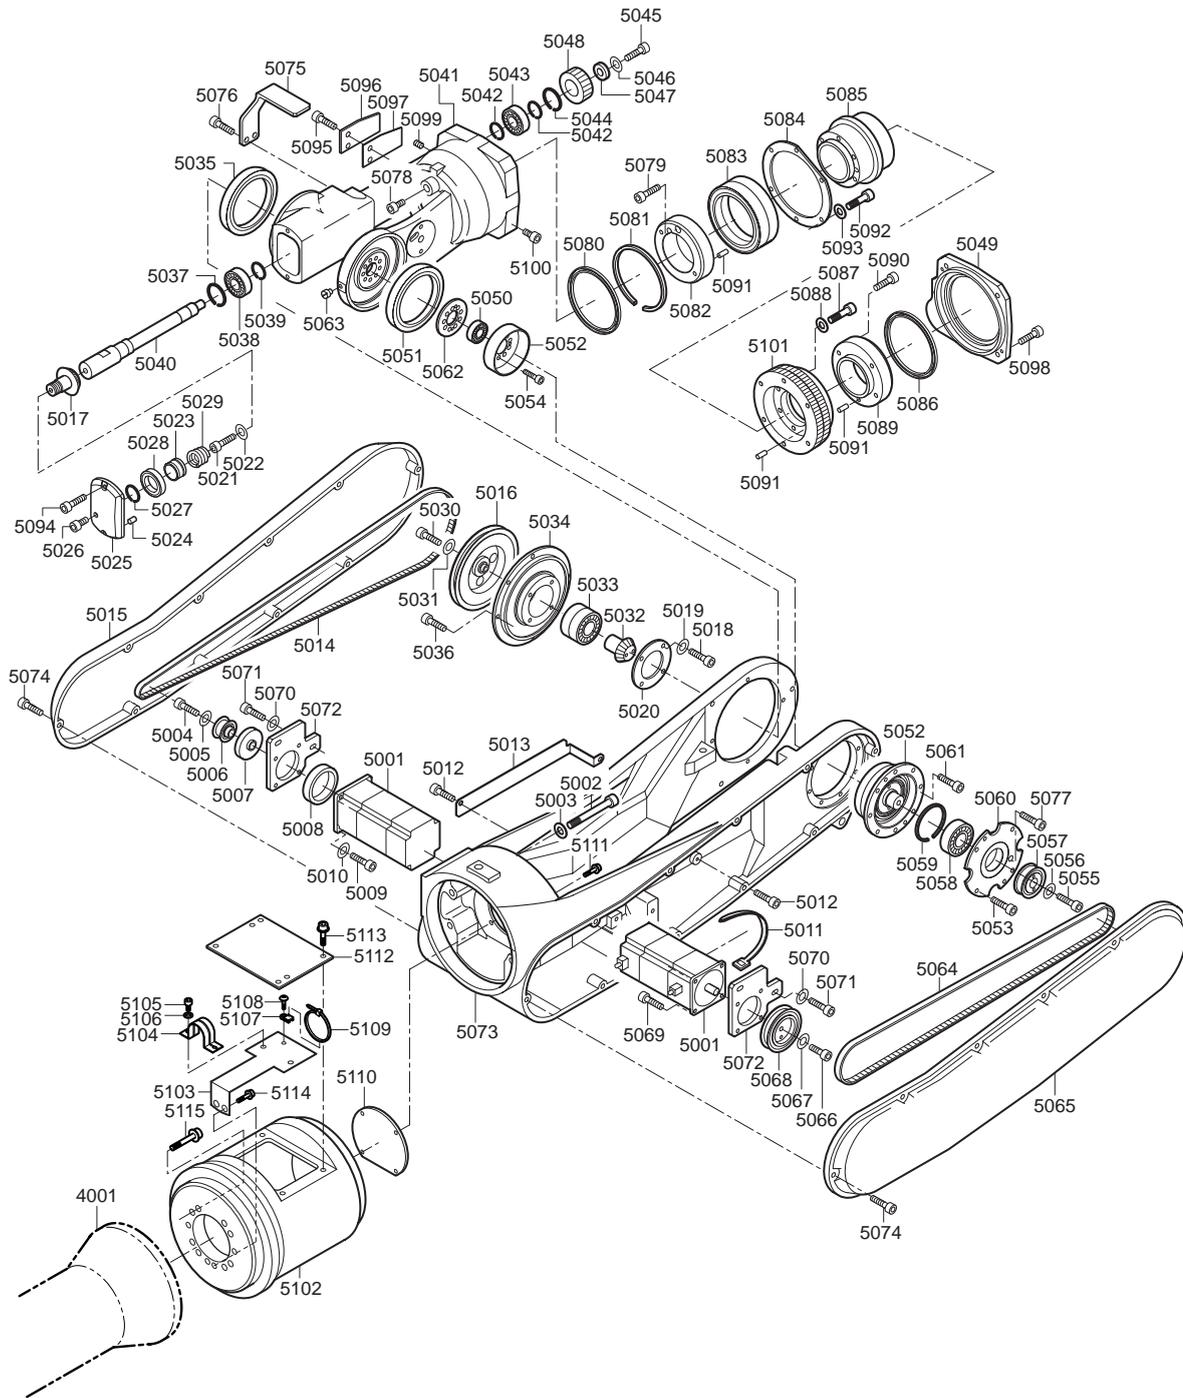

 11 Parts List
 MA3100 11.5 Wrist Unit

Table 11-5: Wrist Unit (Sheet 1 of 3)

No.	DWG No.	Name	Pcs
5001	SGMAV-01ANA-YR1*	Motor	2
5002	M6X55	Socket screw	5
5003	2H-6	Spring washer	5
5004	M4X25	Socket screw	1
5005	2H-4	Spring washer	1
5006	HW0480866-B	Pulley	1
5007	HW0404353-1	Fly wheel	1
5008	HW0404354-1	Spacer	1
5009	M4X25	Socket screw	2
5010	2H-4	Spring washer	2
5011	T50L	Cable tie	1
5012	M4X10	GT-SA bolt	2
5013	HW0403207-1	Cover	1
5014	60S4.5M932	Belt	1
5015	HW0100621-1	Cover	1
5016	HW0480867-B	Pulley	1
5017	HW0311225-1	Gear	1
5018	CBS4-12	Bolt	4
5019	2H-4	Spring washer	4
5020	HW0401553-1	B cover	1
5021	M5X35	Socket screw	1
5022	2H-5	Spring washer	1
5023	HW0410762-1	Shaft	1
5024	MS4-10	Pin	2
5025	HW0410930-1	Cover	1
5026	M6X6	Socket screw	1
5027	WR20	Sirclip	1
5028	6804DDU	Bearing	1
5029	WB22-20	Spring	1
5030	M5X16	Socket screw	1
5031	2H-5	Spring washer	1
5032	HW0301300-2	Gear	1
5033	HW9482218-A	Bearing	1
5034	HW0301310-2	Shaft	1
5035	6811LLU	Bearing	1
5036	M4X12	GT-SA bolt	4
5037	AR28	Sirclip	1
5038	NA4902	Needle bearing	1
5039	WR15	Sirclip	1
5040	HW0311214-1	Shaft	1
5041	HW0100618-2	Wrist	1
5042	WR12	Sirclip	2
5043	NA4901	Needle bearing	1
5044	IRTW-24	Retaining ring	1

MA3100

11 Parts List
11.5 Wrist Unit

Table 11-5: Wrist Unit (Sheet 2 of 3)

No.	DWG No.	Name	Pcs
5045	M6X25	Socket screw	1
5046	2H-6	Spring washer	1
5047	HW8411125-3	Washer	1
5048	HW0310757-1	Gear	1
5049	HW0310758-1	Housing	1
5050	688A	Bearing	1
5051	6812LLU	Bearing	1
5052	HW0381646-A	Speed reducer	1
5053	M4X16	GT-SA bolt	4
5054	M4X12	GT-SA bolt	9
5055	M5X16	Socket screw	1
5056	2H-5	Spring washer	1
5057	HW0481692-A	Pulley	1
5058	6902ZZ*NS7*	Bearing	1
5059	RTW28	Retaining Ring-C type	1
5060	HW0403705-1	Housing	1
5061	M4X12	GT-SA bolt	4
5062	HW0404303-2	Coller	1
5063	LP-M5	Plug	1
5064	60S4.5M711	Belt	1
5065	HW0100622-1	Cover	1
5066	M4X12	Socket screw	1
5067	2H-4	Spring washer	1
5068	HW0481429-A	Pulley	1
5069	M4X10	GT-SA bolt	2
5070	M4	Washer	4
5071	M4X16	GT-SA bolt	4
5072	HW0404547-2	M base	2
5073	HW0100617-1	U arm	1
5074	M4X10	GT-SA bolt	20
5075	HW0303390-1	Cover	1
5076	M4X10	APS bolt	2
5077	M6X6	Socket screw	1
5078	HW0404371-1	Bolt	1
5079	M4X16	GT-SA bolt	6
5080	TC65786	Oil seal	1
5081	AR78	Sirclip	1
5082	HW0310763-1	Shaft	1
5083	6812DBLU	Bearing	1
5084	HW0401552-1	B cover	1
5085	HW0310762-1	Housing	1
5086	TC70826	Oil seal	1
5087	M4X12	GT-SA bolt	6
5089	HW0310761-1	Flange	1
5090	M5X16	GT-SA bolt	4

MA3100	11	Parts List
	11.5	Wrist Unit

Table 11-5: Wrist Unit (Sheet 3 of 3)

No.	DWG No.	Name	Pcs
5091	MS4-10	Pin	3
5092	CBS4-12	Bolt	6
5093	2H-4	Spring washer	6
5094	M4X12	GT-SA bolt	2
5095	M5X10	APS bolt	2
5096	HW0404365-1	Cover	1
5097	HW0404366-1	Packin	1
5098	M4X12	GT-SA bolt	5
5099	M6X6	H set screw	1
5100	M6X6	Socket screw	1
5101	HW0372792-A	Gear ASSY	1
5102	HW0315555-1	Spacer	1
5103	HW0415745-1	Support	1
5104	CD-12	Saddle	1
5105	M5X8	Socket screw	2
5106	2H-5	Spring washer	2
5107	TA-S10	Clamp	1
5108	M5X8	Screw with Spring washer	1
5109	T50R	Cable tie	1
5110	HW0415744-1	Cover	1
5111	M4X10	GT-SA bolt	4
5112	HW0415807-1	Cover	1
5113	M5X12	GT-SA bolt	4
5114	M6X12	GT-SA bolt	2
5115	M6X30	GT-SA bolt	8
4001	HW0102646-2	U-arm-B	1

MOTOMAN-MA3100

INSTRUCTIONS

HEAD OFFICE

2-1 Kurosaki-Shiroishi, Yahatanishi-ku, Kitakyusyu, Fukuoka, 806-0004, Japan
Phone +81-93-645-7745 Fax +81-93-645-7746

MOTOMAN INC. HEADQUARTERS

805 Liberty Lane, West Carrollton, OH 45449, U.S.A.
Phone +1-937-847-6200 Fax +1-937-847-6277

MOTOMAN ROBOTICS EUROPE AB

Franska Vagen 10, Box 4004, 390 04 Kalmar, Sweden
Phone +46-480-417800 Fax +46-480-417999

MOTOMAN ROBOTEC GmbH

Kammerfeld strasse 1, 85391 Allershausen, Germany
Phone +49-8166-90-0 Fax +49-8166-90-103

YASKAWA ELECTRIC KOREA CORPORATION

1787, Sangyeok-2 Dong, Buk-Gu, Daegu, Korea
Phone +82-53-382-7844 Fax +82-53-382-7845

YASKAWA ELECTRIC (SINGAPORE) PTE. LTD.

151 Lorong Chuan, #04-02A, New Tech Park, Singapore 556741
Phone +65-6282-3003 Fax +65-6289-3003

YASKAWA ELECTRIC (THAILAND) CO., LTD.

252/246, 4th Floor. Muang Thai-Phatra office Tower II Rehadapisek Road, Huaykwang Bangkok 10320, Thailand
Phone +66-2-693-2200 Fax +66-2-693-4200

SHOUGANG MOTOMAN ROBOT CO., LTD.

No.7, Yongchang-North Road, Beijing Economic and Technological Development Area, Beijing 100176, China
Phone +86-10-6788-2858 Fax +86-10-6788-2878

MOTOMAN MOTHERSON ROBOTICS LTD.

Plot Number 195-196, First Floor, IMT Manesar -Sector 4, Gurgaon (Haryana), Pin-122050, India
Phone +91-124-475-8500 Fax +91-124-414-8016



YASKAWA ELECTRIC CORPORATION

YASKAWA

Specifications are subject to change without notice
for ongoing product modifications and improvements.

© Printed in Japan May 2010 10-05

MANUAL NO.

HW1480034

78/78